SUZUKI MARINE

# MARKETING

## MARKETING ITEMS

**BRO-SUZ-DT9.9-DT40**
2 Stroke Brochure

**BRO-SUZ-DF2.5-DF30**
Lightweight Brochure

**BRO-SUZ-DF40-DF90**
Mid Range Brochure

**BRO-SUZ-DF100-DF300**
Performance Range Brochure

**99000-79N12-135**
Genuine Rigging Parts and Accessories Brochure

See Marketing Department

**POSTER-KEEP IT REAL SERVICE**

**POSTER-DATA 70 VS 70**

See Marketing Department

## SERVICE ITEMS

See Service Department

**SUZ-WAR-5YR**
5 Year Warranty Brochure

**SUZ-WAR-3YR**
3 Year Warranty Brochure

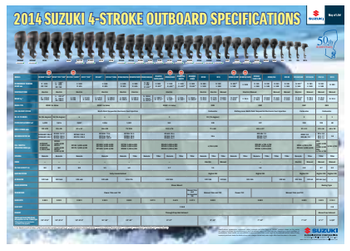


**99999-C3052-014**
2014 Suzuki 4-Stroke Outboard Specifications Poster

# GENUINE RIGGING-PARTS AND ACCESSORIES

AUSTRALIAN & NEW ZEALAND EDITION 14~

suzukimarine.com.au
suzukimarine.co.nz

50th 1965-2015 Anniversary

DISCLAIMER: The Haines Group Pty Ltd reserves the right to modify the information contained on this brochure at any time without notice and, subject only to any statutory obligations, provides the information in this brochure "as is" without warranty of any kind. While The Haines Group Pty Ltd makes all reasonable efforts to ensure that all material in this brochure is correct, it may contain technical or typographical errors, and therefore The Haines Group Pty Ltd does not assume any responsibility for the accuracy or authenticity of any information contained in this brochure.

SUZUKI

Way of Life!

# GENUINE RIGGING-PARTS AND ACCESSORIES

## Quality. Dependability. Innovation.

Everything that you expect from your outboard motors is delivered with style by SUZUKI. Demand no less from the products that you choose to enhance your total boating pleasure. Demand SUZUKI MARINE GENUINE ACCESSORIES. This catalogue represents our commitment to provide you with the finest products available. From our classic line of matching instruments and gauges to our custom-engineered propellers and rigging items, you can depend on SUZUKI MARINE GENUINE ACCESSORIES for optimum performance.

**SUZUKI MARINE, AUSTRALIA AND NEW ZEALAND**

# TABLE OF CONTENTS


| | |
|---|---|
| RIGGING KITS | 04 |
| SERVICE KITS | 06 |
| MODULAR INSTRUMENT SYSTEM | 08 |
| ANALOG INSTRUMENT | 14 |
| SPC ELECTRONIC THROTTLE AND SHIFT SYSTEM | 18 |
| MECHANICAL REMOTE CONTROL SYSTEM | 22 |
| CONTROL CABLES | 26 |
| STEERING | 28 |
| ELECTRICAL PARTS | 31 |
| ANODE | 32 |
| FUEL SYSTEM | 33 |
| PROPELLER | 36 |
| CARE ITEM | 38 |
| MAINTENANCE ITEM | 40 |
| APPLICATION CHART | 42 |


## MODEL NAME AND ENGINE NUMBER

**NOTE**

Items and their part numbers showing in this catalogue are basically applicable to models of following engine numbers. Please consult your local dealers regarding other models and their rigging-parts and accessories.

| model | engine number |
|---|---|
| DF300AP | 30002P-410001~ |
| DF250AP | 25003P-410001~ |
| DF250TX | 25003F-410001~ |
| DF225T | 22503F-410001~ |
| DF225Z | 22503Z-410001~ |
| DF200TX | 20002F-410001~ |
| DF200Z | 20002Z-410001~ |
| DF175T | 17502F-410001 |
| DF175Z | 17502Z-410001~ |
| DF150T | 15002F-410001~ |
| DF150Z | 15002Z-410001~ |
| DF140AT | 14003F-410001~ |
| DF140AZ | 14003Z-410001~ |

| model | engine number |
|---|---|
| DF115AT | 11503F-410001~ |
| DF115AZ | 11503Z-410001~ |
| DF100AT | 10003F-410001~ |
| DF90A | 09003F-410001~ |
| DF80A | 08002F-410001~ |
| DF70A | 07003F-410001~ |
| DF60AV | 06003F-410001~ |
| DF60A | 06002F-410001~ |
| DF50A | 05003F-410001~ |
| DF40A | 04003F-410001~ |
| DF25 | 02503F-410001~ |
| DF20A | 02002F-410001~ |
| DF15A | 01504F-410001~ |

| model | engine number |
|---|---|
| DF9.9A | 00994F-410001~ |
| DF8A | 00801F-410001~ |
| DF6 | 00602F-410001~ |
| DF5 | 00502F-410001~ |
| DF4 | 00402F-410001~ |
| DF2.5 | 00252F-410001~ |
| DT40W | 04005-410001~ |
| DT40WK | 04005K-410001~ |
| DT30 | 03005-410001~ |
| DT15A | 01504-410001~ |
| DT9.9A | 00996-410001~ |

**REFERENCE**

| | |
|---|---|
| Part Number | Digits in bold are part numbers to be used for ordering |
| Gauge Size | Shows the size (2" or 4") of the gauge. |
| Background | Shows a main color of display panel on the front of a gauge. |
| Applicable Model | Shows typical or recommended models of ENGINES that RIGGING-PARTS and ACCESSORIES can be installed to. |
| Maximum Speed | Shows maximum speed that SPEEDOMETER displays. |
| kph | Kilometers Per Hour |
| mph | Miles Per Hour |
| knots | Knots |

# RIGGING KITS

Whether you're looking for optional parts to enhance your boating experience or spare parts for maintenance, we offer a wide selection of parts and accessories designed to complement your Suzuki outboard motor.

## RIG KITS DF40 TO DF250

### RIGSSM
Single Side Mount Rig Kit

Standard side mount control box with key switch, harness 6.5m & associated fitting components

### RIGTSM
Twin Side Mount Rig Kit

2 x Standard side mount control box with key switch, 2 x harness 6.5m & associated fitting components

### RIGSB
Single Binnacle Rig Kit

Single binnacle control box, harness 6.5m, single key switch

### RIGDB
Dual Binnacle Rig Kit

Dual binnacle control box, harness 6.5m, single key switch

### RIGCSM
Concealed Side Mount Rig Kit

Concealed control box, harness 6.5m, Single Key Switch

## ANALOGUE GAUGE KIT

### RIGANB
Black Analogue Gauge Kit

Black gauge, tacho, speedo, trim

### RIGANW
White Analogue Gauge Kit

White gauge, tacho, speedo, trim

## DIGITAL INTERFACE KITS

### RIGSDI
Single Engine Digital Interface Kit

Interface cable, warning light panel, harness 6.5m

### RIGDDI
Dual Engine Digital Interface Kit

2 x Interface cable, 2 x warning light panel, 2 x harness 6.5m

**Note: For detailed listing of kits please refer to Netsuite or Excel price list**

## FORWARD CONTROL KITS

Kit contains: Control Box, Harness, Attaching Kit and Associated Fitting Components

### RIGDF8FC
Forward control attaching kit for DF8A

### RIGDF9.9FC
Forward control attaching kit for DF9.9A

### RIGDF15/20FC
Forward control attaching kit for DF15A/20A

### RIGDF25FC
Forward control attaching kit for DF25 v-twin model

### RIGDT30FC
Forward control attaching kit for DT30

### RIGDT40FC
Forward control attaching kit for DT40

## RIG KITS DF150TG/175TG + 250AP/300AP

### RIGSPCCON
Single Engine Single Station Concealed

Concealed control box, harness 9.5m, single key switch, interface cable & associated fitting components

### RIGSPCSE
Single Engine Single Station

Single binnacle control box, harness 9.5m, single key switch, 1 x interface cable & associated fitting components

### RIGSPCDE
Dual Engine Single Station

Dual binnacle control box, harness 9.5m, dual key switch, 2 x interface cable & associated fitting components

### RIGSPCSEDS
Single Engine Dual Station

Single binnacle control box, harness, single key switch, interface cable & associated fittings components

### RIGSPCDEDS
Dual Engine Dual Station

2 x Dual binnacle control box, harness, 2 x dual key switch, 2 x interface cables & associated fittings components

### RIGSPCTE
Triple Engine Single Station

Dual binnacle control box, harness, triple key switch, 3 x interface cables & associated fittings components

### RIGSPCTEDS
Triple Engine Dual Station

2 x Dual binnacle control box, harness, 2 x triple key switch, 3 x interface cables & associated fittings components

### RIGSPCQE
Quad Engine Single Station

Dual binnacle control box, harness, quad key switch, 4 x interface cables & associated fittings components

### RIGSPCQEDS
Quad Engine Dual Station

2 x Dual binnacle control box, harness, 2 x quad key switch, 4 x interface cables & associated fittings components

## CONTROL SYSTEM

Single Ignition Key Switch

Dual Ignition Key Switch

Standard Side-Mount Control Box

Concealed Side-Mount Control Box

Single Binnacle

Dual Binnacle

## DIGITAL THROTTLE & SHIFT

Single Engine Start/Stop Control

Dual Engine Start/Stop Control

Concealed Side-Mount

Single Binnacle

Dual/Triple/Quad Binnacle

## ANALOGUE GAUGES

Tachometer

Speedometer

Fuel Gauge

Trim Gauge

Volt Meter

Tachometer

Speedometer

Fuel Gauge

Trim Gauge

Volt Meter

## PROPS

Four Blade Props Available for DF150 to DF300AP

Three Blade Stainless-Steel Props Available

# SERVICE KITS

Suzuki Marine Genuine Service Kits are suitable for all four stroke models. Contains all recommended parts for your yearly service.
Note: For kit contents - refer to current price list.

## ANNUAL SERVICE KITS

**KITSER-87J99-100**
DF 40/50 Service Kit 99~10

**KITSER-87L09-000**
DF70A/80A/90A Service Kit 09~

**KITSER-88L10-000**
DF40A/50A/60A Service Kit 10~

**KITSER-89J00-080**
DF 25/30 Service Kit 00~08

**KITSER-89L13-000**
DF 15A/20A Service Kit 13~

**KITSER-90J01-060**
DF 90/115 Service Kit 01~06

**KITSER-90J07-080**
DF 90/100/115 Service Kit 07~08

**KITSER-90J09-012**
DF 100/115 Service Kit 09~12

**KITSER-90L13-000**
DT9.9/15 Service Kit 13

**KITSER-91J02-100**
DF 4/5/6 Service Kit 02~10

**KITSER-91J11-000**
DF 4/5/6 Service Kit 11

**KITSER-91L01-000**
DT30 Service Kit 01

**KITSER-92J02-060**
DF 140 Service Kit 02~06

**KITSER-92J07-080**
DF 140 Service Kit 07~08

**KITSER-92J09-012**
DF 140 Service Kit 09~12

**KITSER-92J13-000**
DF 100A/115A/140A Service Kit 13~

**KITSER-92L01-000**
DT40 Service Kit 01~

**KITSER-93J04-000**
DF 200/225 Service Kit 04~

**KITSER-93J04-000 DF250**
DF 250 Service Kit 04~

**KITSER-94J05-060**
DF 9.9/15 Service Kit 05~06

**KITSER-94J07-100**
DF 9.9/15 Service Kit 07~10

**KITSER-94J11-012**
DF 15 Service Kit 11~12

**KITSER-94J96-040**
DF 9.9/15 Service Kit 96~04

**KITSER-95J06-000**
DF 25 V-Twin Service Kit 06~

**KITSER-96J06-000**
DF 150 Service Kit 06~

**KITSER-96J06-000**
DF 175 Service Kit 06~

**KITSER-97J06-100**
DF 2.5 Service Kit 06~10

**KITSER-97J11-000**
DF 2.5 Service Kit 11~

**KITSER-98J07-000**
DF 250A/300/300A Service Kit 07~

**KITSER-99E08-090**
DF 60/70 Service Kit 08~09

**KITSER-99E98-070**
DF 60/70 Service Kit 98~07

**KITSER-94L14-000**
DF 25/30 Service Kit 14~

## OIL CHANGE/6 MONTH SERVICE KITS

**AKIT-99J10-000**
DF 8A/9.9A Service Kit 10~

**AKIT-87L09-100**
For DF70A/80A/90A 09~10

**AKIT-87L11-000**
For DF70A/80A/90A 11~

**AKIT-89L13-000**
For 15A/20A 13~

**AKIT-90J01-000**
For DF90/100/115 01~ & DF140 13~

**AKIT-91J02-000**
For DF4/5/6 02~ 12

**AKIT-92J02-000**
For DF140 02~

**AKIT-93J04-000**
For DF200/225/250 04~ DF300 07~

**AKIT-94J11-000**
For DF15 11~

**AKIT-94J96-100**
For DF9.9/15 96~10

**AKIT-95J06-000**
For DF25 V-TWIN 06~
DF25/30 00-08 DF40/50 99~
DF40A/50A/60A 10~ DF60/70 98~

**AKIT-96J06-000**
DF150/175 06~

**AKIT-97J06-000**
DF2.5 06~

**AKIT-99J10-000**
DF8A/9.9A 10~

**Note: For detailed listing of kits please refer to Netsuite or Excel price list**

# MODULAR INSTRUMENT SYSTEM

SUZUKI MODULAR INSTRUMENT SYSTEM (SMIS) uses an easy to connect and expandable cable system to transmit graphic and numerical data to Multi-Function gauges. Easy to set up and install system can be used with nearly any boat and SUZUKI Outboard. Connected to the NMEA2000® compatible system, the gauges can display real-time readings from compatible electronic probes and the exclusive SMIS engine interface to monitor all engine functions.
(Engine Monitor with 4" gauge only)

**APPLICABLE MODELS : 15A/20A/40A/50AT/60A/60AV/70A/80A/90A/100A-300A**

## SMIS MULTI-FUNCTION GAUGE

The 4" multi-function gauge uses a state-of-the-art high-contrast, dot matrix display to monitor real-time graphic and numerical digital data. When connected into the SMIS system, it can monitor all engine functions, act as a speedometer, tachometer, GPS*, and many others. (*GPS requires additional hardware.)
The 2" multi-function gauge is capable of all functions of the 4" gauge except diagnostic informations.
When connected to the SMIS system, it can be programmed to monitor all other functions.

### 4" SMIS MULTI-FUNCTION GAUGE

Quad analog page as a tachometer, a volt meter, a water-pressure gauge and a speedometer for single engine

**34200-88L02-000** 011

with a gray bezel + a T-connector (36664-88L00-000) +
Operation & Installation Manual

**Examples of display****

Engine trim page as a trim gauge for single engine

Fuel manager page as a fuel gauge

Single analog page as a tachometer for single engine

Dual digital page as a hour meter and a speedometer for single engine

Single analog page as a speedometer

Diagnostics page

### 2" SMIS MULTI-FUNCTION GAUGE

Fuel manager page

**34800-88L01-000** 012

with a gray bezel + a T-connector (36664-88L00-000) +
Operation & Installation Manual

**Examples of display****

as a volt meter for single engine

Fuel manager page

Engine trim page as a trim gauge for single engine

** The detail instructions of display-operation are explained in the Operation & Installation Manual.

## OPTIONAL INSTRUMENT TRIM

Change the standard gray bezel to suit your application.
Two different bezel finishes are available for 2" or 4" Multi-Function gauges.

The image shows 4" bezel, "chrome", 34193-88L00-000.

**4" bezel, chrome**
**34193-88L00-000**

**4" bezel, white**
**34193-88L20-000**

**2" bezel, chrome**
**34193-88L40-000**

**2" bezel, white**
**34193-88L60-000**

## GARMIN

**GAR-010-01140-00**

GMI20 4" Colour Marine instrument display designed to show depth, speed, wind and 100+ marine and vessel parameters

**GAR-010-01103-01**

GPS Map 751XS
Combination Chart plotter/sounder with media interface and auto pilot compatibility, radar support and NMEA 2000 / wifi connectivity

**GAR-010-01103-00**

GPS Map751
Chart plotter/with media interface and auto pilot compatibility, radar support and NMEA 2000 / wifi connectivity

## GPS RECEIVER MODULE WITH A T-CONNECTOR

**GAR-010-01010-10** 032

Displays the accurate location and speed on multi-function gauges. Highly acurate receiver/ antenna provides 10HZ update rates for position, velocity and time data

## TRANSDUCER

**GAR-010-10192-21**
P66 Plastic Transom Mount 600w 200/50 khz

**GAR-010-10194-21**
P319 Plastic Through hull 600w 200/50 khz

**GAR-010-11928-20**
TM150 Transom Mount 300w 95/155

# SUZUKI MODULAR INSTRUMENT SYSTEM

## ENGINE INTERFACE

The most important part of the SMIS data system. DF150TG/ZG/175TG/ZG/250AP/300AP connect to the system, using Engine Interface Adapter.

### ENGINE INTERFACE ADAPTER

**36661-98J10-000** 017
for single DF150TG/ZG/175TG/ZG/250AP/300AP

**36661-98J20-000** 018
for dual DF150TG/ZG/175TG/ZG/250AP/300AP

**36661-98J30-000** 019
for triple DF150TG/ZG/175TG/ZG/250AP/300AP

### ENGINE INTERFACE UNIT WITH A T-CONNECTOR

**34922-88L02-000** 015

### SMIS ADAPTER

**36668-88L00-000** 016
for 40AT-250T/Z with analog gauge system to add on digital gauges 1.8m

**36668-88L00-HSM**
for 40AT-250T/Z with analog gauge system to add on digital gauges 6.5M

**36660-89L00-000**
for DF9.9A/15A/20A with analog gauge system to add on digital gauges 7.1m

## POWER CABLE

The fused (3A) lead connects the extension cable to the power source.

### SMIS POWER CABLE WITH A T-CONNECTOR

**36663-88L00-000** 020

### POWER NODE WITH A T-CONNECTOR

**36663-88L10-000** 021
Allows network to be powered from multiple power sources (key switch, accessory switch, etc...). For multiple (2 or 3) engines of DF9.9A/15A/20A/40A-250T/Z

## CONNECTION HARDWARE

### T-CONNECTOR

**36664-88L00-000**

**GAR-010-11078-00** 022
T-connectors link all compatible cables, data and sensor devices, and can be easily secured.

### TERMINATOR FEMALE

**36665-88L00-000**

**GAR-010-11081-00** 023
120-ohm terminators are required for any open cable ends in the system.

### TERMINATOR MALE

**36665-88L10-000**

**GAR-010-11080-00** 024
120-ohm terminators are required for any open cable ends in the system.

### ADAPTER HARNESS TO N NETWORK

**36666-88L00-000** 025
(Black network to Blue devices) Allows connection to other NMEA devices (Device NET).

### ADAPTER HARNESS TO L NETWORK

**36666-88L10-000** 026
(Blue network to Black devices)

## SENSORS

### FLUID LEVEL SENSOR WITH A T-CONNECTOR

**34810-88L00-000** 027
Monitors the fluid levels such as fuel, live well water level. etc. 10ft cable.

### SPEED SENSOR WITH A T-CONNECTOR

**34190-88L00-000** 028
Paddle wheel-type speed sensor. 10ft cable.

### WATER PRESSURE SENSOR WITH A T-CONNECTOR

**34960-88L00-000** 031

### WATER TEMPERATURE SENSOR WITH A T-CONNECTOR

**34455-88L00-000** 029
Surface-water temperature sensor. 10ft cable.

**34455-88L10-000** 030
(Thru-Hull type)

## CONNECTION CABLE

The extension cable is the main line of SMIS. Data communication runs the length of the boat, capped at each and with a 120-ohm terminator. NMEA2000® compatible sensors or other devices can be added by the use of T-connectors throughout the system.

### EXTENSION CABLE

**36662-88L10-000**
2 feet cable

**36662-88L20-000** 033
6 feet cable

**36662-88L30-000**
15 feet cable

**36662-88L00-000**
25 feet cable

**GAR-010-11076-00**
2 m cable

**GAR-010-11076-01**
6 m cable

**GAR-010-11076-02**
10 m cable

## Example of Connection for DF150TG/175TG/ZG/250AP/300AP with SMIS Multi-Function Gauge

(in case of equipping the same quantities of 4" and 2" gauges as engines and stations, and all optional items)

NOTE: (*1): The required or recommended quantities are shown. Numbers in round-parentheses show the required ones if equipped in the package, the total number of the T-connectors enclosed in them may be short to the required quantity.
(*2): While some of SMIS items have a T-connector in may be short to the required quantity.
(*3): SMIS adapter is required only for DF9.9B/15A/20A.

| category | Ref. # | part name | Number of T-connector Included | Contents of Gauge Kit | | engine(s) | | | | | | | | | | | | part number |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | 1 | 2 | 3 | 1 | | | 2 | | | 3 | | | |
| | | | | | | station(s) | | | | | | | | | | | | |
| | | | | | | 1 | 1 | 1 | 2 total | 1st | 2nd | 2 total | 1st | 2nd | 2 total | 1st | 2nd | |
| | | | | 4" | 2" | required quantity per boat (*1) | | | | | | | | | | | | |
| SMIS multi-function gauge | ❶ | 4" SMIS Multi-Function Gauge with a gray bezel | 1 | 1 | | 1 | 2 | 3 | 2 | 1 | 1 | 4 | 2 | 2 | 6 | 3 | 3 | 34200-88L02-000 |
| | | 4" Gauge Kit | 3 | KIT | | | | | | | | | | | | | | 34011-88L03-000 |
| | ❷ | 2" SMIS Multi-Function Gauge with a gray bezel | 1 | | 1 | 1 | 2 | 3 | 2 | 1 | 1 | 4 | 2 | 2 | 6 | 3 | 3 | 34800-88L01-000 |
| engine interface | ❸ | Engine Interface unit | 1 | 1 | 1 | 1 | 2 | 3 | 1 | 1 | | 2 | 2 | | 3 | 3 | | 34922-88L02-000 |
| | ❹ | Engine Interface Adapter for single | 0 | | | 1 | | | 1 | 1 | | | | | | | | 36661-98J10-000 |
| | | Engine Interface Adapter for dual | 0 | | | | 1 | | | | | 1 | 1 | | | | | 36661-98J20-000 |
| | | Engine Interface Adapter for triple | 0 | | | | | 1 | | | | | | | 1 | 1 | | 36661-98J30-000 |
| power cable | ❺ | Power Cable | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | | 1 | 1 | | 36663-88L00-000 |
| connection cable | ❻ | Extension Cable 2 feet | 0 | | | 1 | 2 | 3 | 2 | 1 | 1 | 3 | 2 | 1 | 4 | 3 | 1 | 36662-88L10-000 |
| | | Extension Cable 6 feet | 0 | | | | | | | | | | | | | | | 36662-88L20-000 |
| | | Extension Cable 15 feet | 0 | | | | | | | | | | | | | | | 36662-88L30-000 |
| | | Extension Cable 25 feet | 0 | 0 | 1 | | | | | | | | | | | | | 36662-88L00-000 |
| connection hardware | ❼ | T-Connector (*2) | 1 | 3 | 3 | 4 (*2) | 7 (*2) | 10 (*2) | 6 (*2) | 4 | 2 | 11 (*2) | 7 | 4 | 16 (*2) | 10 | 6 | 36664-88L00-000 |
| | ❽ | Terminator Female | 0 | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | | 1 | 1 | | 1 | 36665-88L00-000 |
| | ❾ | Terminator Male | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | | 1 | 1 | | 36665-88L10-000 |
| | | Adapter Harness to N network (Black network to Blue devices) | 0 | | | | | | | | | | | | | | | 36666-88L00-000 |
| | | Adapter Harness to L network (Blue network to Black devices) | 0 | | | | | | | | | | | | | | | 36666-88L10-000 |
| sensor | | Fluid Level Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34810-88L00-000 |
| | | Speed Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34190-88L00-000 |
| | | Water Temperature Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34455-88L00-000 |
| | | Water Temperature Sensor (Thru-Hull type) | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34455-88L10-000 |
| | | Water Pressure Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34960-88L00-000 |
| | | GPS Receiver Module | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 39950-88L00-000 |
| optional trim | | 4" bezel, chrome | 0 | | | | | | | | | | | | | | | 34193-88L00-000 |
| | | 4" bezel, white | 0 | | | | | | | | | | | | | | | 34193-88L20-000 |
| | | 2" bezel, chrome | 0 | | | | | | | | | | | | | | | 34193-88L40-000 |
| | | 2" bezel, white | 0 | | | | | | | | | | | | | | | 34193-88L60-000 |

**SINGLE ENGINE DF150TG/ZG/ 175TG/ZG/ 250AP/300AP**

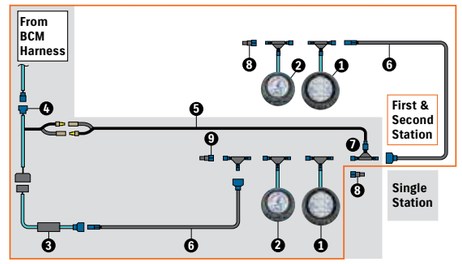


**DUAL ENGINE OF DF150TG/ZG/ 175TG/ZG/ 250AP/300AP**

**TRIPLE ENGINE OF DF150TG/ZG/ 175TG/ZG/ 250AP/300AP**

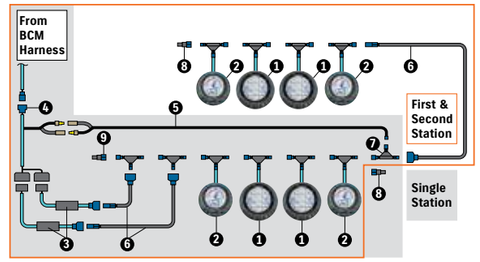


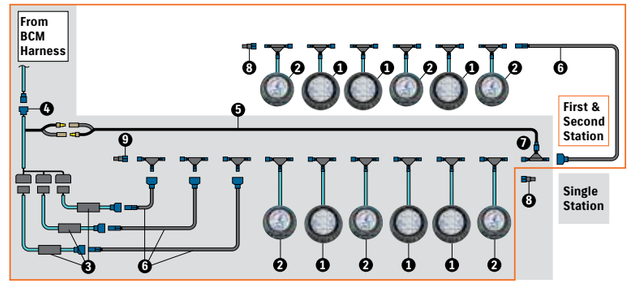


## Example of Connection for DF9.9A/15A/20A/40A-250 with SMIS Multi-Function Gauge

(in case of equipping the same quantities of 4" and 2" gauges as engines' and stations', and all optional items)

| category | Ref. # | part name | Number of T-connector Included | Contents of Gauge Kit | | engine(s) | | | | | | | | | | | | part number |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | 1 | 2 | 3 | 1 | | | 2 | | | 3 | | | |
| | | | | | | station(s) | | | | | | | | | | | | |
| | | | | | | 1 | 1 | 1 | 2 total | 1st | 2nd | 2 total | 1st | 2nd | 2 total | 1st | 2nd | |
| | | | | 4" | 2" | required quantity per boat (*1) | | | | | | | | | | | | |
| SMIS multi-function gauge | ❶ | 4" SMIS Multi-Function Gauge with a gray bezel | 1 | 1 | | 1 | 2 | 3 | 2 | 1 | 1 | 4 | 2 | 2 | 6 | 3 | 3 | 34200-88L02-000 |
| | | 4" Gauge Kit | 3 | KIT | | | | | | | | | | | | | | 34011-88L03-000 |
| | ❷ | 2" SMIS Multi-Function Gauge with a gray bezel | 1 | | 1 | 1 | 2 | 3 | 2 | 1 | 1 | 4 | 2 | 2 | 6 | 3 | 3 | 34800-88L01-000 |
| engine interface | ❸ | Engine Interface unit | 1 | 1 | 1 | 1 | 2 | 3 | 1 | 1 | | 2 | 2 | | 3 | 3 | | 34922-88L02-000 |
| power cable | ❺ | Power Cable | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | | 1 | 1 | | 36663-88L00-000 |
| | ❿ | Power Node for multiple engine of DF40-250 only | 1 | | | | 1 | 1 | | | | 1 | 1 | | 1 | 1 | | 36663-88L10-000 |
| connection cable | ❻ | Extension Cable 2 feet | 0 | | | 1 | 2 | 3 | 2 | 1 | 1 | 3 | 2 | 1 | 4 | 3 | 1 | 36662-88L10-000 |
| | | Extension Cable 6 feet | 0 | | | | | | | | | | | | | | | 36662-88L20-000 |
| | | Extension Cable 15 feet | 0 | | | | | | | | | | | | | | | 36662-88L30-000 |
| | | Extension Cable 25 feet | 0 | 0 | 1 | | | | | | | | | | | | | 36662-88L00-000 |
| connection hardware | ❼ | T-Connector (*2) | 1 | 3 | 3 | 4 (*2) | 7 (*2) | 10 (*2) | 6 (*2) | 4 | 2 | 11 (*2) | 7 | 4 | 16 (*2) | 10 | 6 | 36664-88L00-000 |
| | ❽ | Terminator Female | 0 | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | | 1 | 1 | | 1 | 36665-88L00-000 |
| | ❾ | Terminator Male | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | | 1 | 1 | | 36665-88L10-000 |
| | | Adapter Harness to N network (Black network to Blue devices) | 0 | | | | | | | | | | | | | | | 36666-88L00-000 |
| | | Adapter Harness to L network (Blue network to Black devices) | 0 | | | | | | | | | | | | | | | 36666-88L10-000 |
| sensor | | Fluid Level Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34810-88L00-000 |
| | | Speed Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34190-88L00-000 |
| | | Water Temperature Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34455-88L00-000 |
| | | Water Temperature Sensor (Thru-Hull type) | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34455-88L10-000 |
| | | Water Pressure Sensor | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 34960-88L00-000 |
| | | GPS Receiver Module | 1 | | | (1) | (1) | (1) | (1) | | | (1) | | | (1) | | | 39950-88L00-000 |
| optional trim | | 4" bezel, chrome | 0 | | | | | | | | | | | | | | | 34193-88L00-000 |
| | | 4" bezel, white | 0 | | | | | | | | | | | | | | | 34193-88L20-000 |
| | | 2" bezel, chrome | 0 | | | | | | | | | | | | | | | 34193-88L40-000 |
| | | 2" bezel, white | 0 | | | | | | | | | | | | | | | 34193-88L60-000 |
| adapter cable | ⓫ | SMIS adapter (*3) | 0 | | | 1 | 2 | 3 | 1 | 1 | | 2 | 2 | | 3 | 3 | | 36660-89L00-000 |

**SINGLE ENGINE OF DF15A/20A/ 40A-250**

(*3)

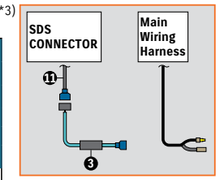


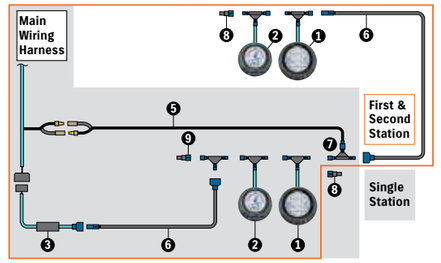


**DUAL ENGINE OF 40A-250**

**TRIPLE ENGINE OF DF 40A-250**

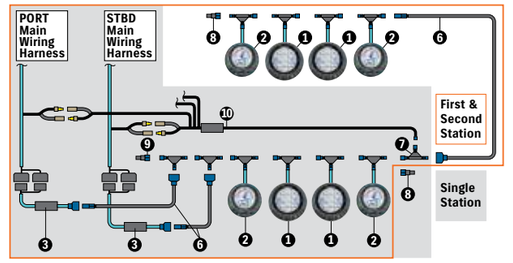


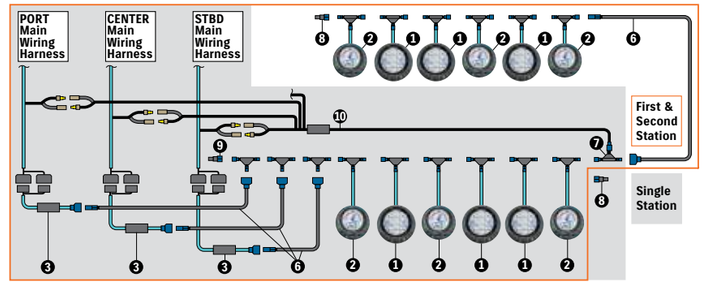


: Single Station : First & Second Station

# ANALOG INSTRUMENT

## WARNING LIGHT INFORMATION

| Caution lamp | Caution type |
|---|---|
| CHECK ENGINE | Low battery-voltage or Other cautions on S.D.S |
| TEMP | Overheat ( Over-revolution ) |
| OIL | Low oil-pressure ( Over-revolution )<br>Oil change reminder |
| REV LIMIT | Over-revolution/Troll Mode |

## TACHOMETER

### 34200-93J11-000 034

| | |
|---|---|
| Gauge Size | 4” |
| Background | White |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Caution systems alert with a monitor lamp lighting on when an abnormal engine condition occurs. Refer to SERVICE MANUAL for the detail.

### 34200-93J50-000 036

| | |
|---|---|
| Gauge Size | 4” |
| Background | White |
| Applicable Model | DF40A-140AT/Z |

Exclusive for SUZUKI Troll Mode System. Automatically switches to low RPM scale when the SUZUKI Troll Mode System is activated.

### 34200-93J31-000 038

| | |
|---|---|
| Gauge Size | 4” |
| Background | White |
| Applicable Model | DF8A/9.9A/15A/ 20A/25/DT30R/40WR |

Full-scale 7000-RPM TACHOMETER can be used on electric-start models by using 4, 6 or 12 pole switch on rear of meter.

### 34200-93J00-000 035

| | |
|---|---|
| Gauge Size | 4” |
| Background | Black |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Caution systems alert with a monitor lamp lighting on when an abnormal engine condition occurs. Refer to SERVICE MANUAL for the detail.

### 34200-93J40-000 037

| | |
|---|---|
| Gauge Size | 4” |
| Background | Black |
| Applicable Model | DF40A-140AT/Z |

Exclusive for SUZUKI Troll Mode System. Automatically switches to low RPM scale when the SUZUKI Troll Mode System is activated.

### 34200-93J20-000 039

| | |
|---|---|
| Gauge Size | 4” |
| Background | Black |
| Applicable Model | DF8A/9.9A/15A/ 20A/25/DT30R/40WR |

Full-scale 7000-RPM TACHOMETER can be used on electric-start models by using 4, 6 or 12 pole switch on rear of meter.

## SPEEDOMETER

### 34100-93J11-000 040

| | |
|---|---|
| Gauge Size | 4” |
| Background | White |
| Maximum Speed | 130km/h, 80mph |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.

### 34100-93J31-000 042

| | |
|---|---|
| Gauge Size | 4” |
| Background | White |
| Maximum Speed | 80km/h, 50mph |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.

### 34100-93J51-000 044

| | |
|---|---|
| Gauge Size | 4” |
| Background | White |
| Maximum Speed | 80km/h, 45knots |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.

### 34100-93J00-000 041

| | |
|---|---|
| Gauge Size | 4” |
| Background | Black |
| Maximum Speed | 130km/h, 80mph |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.

### 34100-93J20-000 043

| | |
|---|---|
| Gauge Size | 4” |
| Background | Black |
| Maximum Speed | 80km/h, 50mph |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.

### 34100-93J40-000 045

| | |
|---|---|
| Gauge Size | 4” |
| Background | Black |
| Maximum Speed | 80km/h, 45knots |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.

## SPEEDOMETER SENDER ASSY

### 34100-93J60-000 046

| | |
|---|---|
| Gauge Size | 4” |
| Background | White |
| Maximum Speed | 120km/h, 65knots |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Bourdon-tube type speedometer with readings in km/h and knots. Includes vinyl tube, hardware and installation manual.

### 34190-95500-000 047

| | |
|---|---|
| Applicable Model | DF9.9A-20AT/25R/40AT-300AP,DT30R/40WR |

### 34190-87D00-000 048

| | |
|---|---|
| Applicable Model | DF9.9A-20A/25/40A-140AT/Z/150T/Z/175T/Z/ 200T/Z-250T/Z,DT30R/40WR |

# ANALOG INSTRUMENT

## TRIM GAUGE

**34800-93J11-000** 049

| | |
|---|---|
| Gauge Size | 2” |
| Background | White |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Magnetic-type gauge shows trim angle for optimum performance and efficiency.

**34800-93J00-000** 050

| | |
|---|---|
| Gauge Size | 2” |
| Background | Black |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Magnetic-type gauge shows trim angle for optimum performance and efficiency.

## FUEL GAUGE

**34300-93J11-000** 051

| | |
|---|---|
| Gauge Size | 2” |
| Background | White |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

FUEL GAUGE alone works with the US Standard 250Ω sending unit. Use the 150Ω adaptor to connect the gauge to a European standard sending unit.

**34300-93J00-000** 052

| | |
|---|---|
| Gauge Size | 2” |
| Background | Black |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

FUEL GAUGE alone works with the US Standard 250Ω sending unit. Use the 150Ω adaptor to connect the gauge to a European standard sending unit.

## HOUR METER

**34500-93J11-000** 053

| | |
|---|---|
| Gauge Size | 2” |
| Background | White |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

12-volt-electric-motor-driven meter indicates hours that your outboard motor has been operated in order for you to know when each periodic service is required.

**34500-93J00-000** 054

| | |
|---|---|
| Gauge Size | 2” |
| Background | Black |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

12-volt-electric-motor-driven meter indicates hours that your outboard motor has been operated in order for you to know when each periodic service is required.

## VOLTMETER

**34600-93J11-000** 055

| | |
|---|---|
| Gauge Size | 2” |
| Background | White |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

To help your SUZUKI OUTBOARD MOTOR run at its best, monitor the charging system functioning with a VOLTMETER.

**34600-93J00-000** 056

| | |
|---|---|
| Gauge Size | 2” |
| Background | Black |
| Applicable Model | DF8A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30R/40WR |

To help your SUZUKI OUTBOARD MOTOR run at its best, monitor the charging system functioning with a VOLTMETER.

## WATER-PRESSURE GAUGE

**34650-93J31-000** 057

| | |
|---|---|
| Gauge Size | 2” |
| Background | White |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Bourdon-tube type gauge measures cooling-water pressure. Select an approriate INSTALLATION KIT for each model.

**34650-93J20-000** 058

| | |
|---|---|
| Gauge Size | 2” |
| Background | Black |
| Applicable Model | DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z |

Bourdon-tube type gauge measures cooling-water pressure. Select an approriate INSTALLATION KIT for each model.

## INSTALLATION KIT for WATER-PRESSURE GAUGE

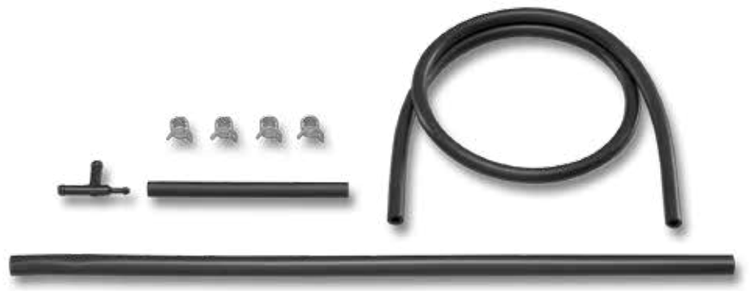

**34660-90J02-000**

| | |
|---|---|
| Applicable Model | DF40A-140AT/Z |

**34660-96J00-000**

| | |
|---|---|
| Applicable Model | DF150T/Z-175T/Z |

**34660-93J00-000** 059

| | |
|---|---|
| Applicable Model | DF200T/Z-250T/Z |

KIT includes fittings and hoses needed for motor to gauge connection.

SUZUKI PRECISION CONTROL

# ELECTRONIC THROTTLE AND SHIFT SYSTEM

- Computerized Drive by Wire system of the Suzuki Precision Control (SPC) eliminates wiring friction losses and allows smooth and superior handling. As a result, SPC makes smooth and linear control from start and at low speed.
- By the control panel operation(included remote-control kits), you can start and stop the engine and change a steering station with multiple engines you can control the synchronization of an engine rev and change the tilt angles.
- Not only DF300A/250A, but also DF150TG/ZG, AF175TG/ZG are suitable for this system.
- Chrome plating finish for better rust resistance
- applicable to maximum 2 station and maximum 4 engines
- 8 kinds of rigging parts kits are available for your convenience to select all necessary parts for your requirements.

060

061

062

## REMOTE-CONTROL KIT for SINGLE ENGINE

| SINGLE STATION | | STATION | DUAL STATION | | | | |
|---|---|---|---|---|---|---|---|
| 67000-98J08-000<br>-<br>67000-98J67-000 | | BINNACLE-MOUNT CONTROL KIT<br>or<br>FLUSH-MOUNT CONTROL KIT | First Station<br>67000-98J08-000<br>-<br>67000-98J67-000 | + | Second Station<br>67000-98J18-000 | | |
| DF150TG/ZG/175TG/ZG/250AP/300AP | QTY | Applicable Model<br>Contents: | DF150TG/ZG/175TG/ZG/250AP/300AP | | DF150TG/ZG/175TG/ZG/250AP/300AP | | QTY |
| 67200-98J03-000 060<br>-<br>67200-98J22-000 061 | 1 | BINNACLE MOUNT R/C BOX<br>or<br>FLUSH MOUNT R/C BOX | 67200-98J03-000 060<br>-<br>67200-98J22-000 061 | 1 | 67200-98J03-000 060<br>-<br>- | 1 | 2 |
| 37100-98J03-000 063 | 1 | MAIN SWITCH PANEL | 37100-98J03-000 063 | 1 | - | - | 1 |
| 37100-98J11-000 064 | 1 | CONTROL PANEL | 37100-98J11-000 064 | 1 | 37100-98J11-000 064 | 1 | 2 |
| 38500-93J90-000 095 | 1 | WARNING BUZZER | 38500-93J90-000 095 | 1 | 38500-93J90-000 095 | 1 | 2 |
| 09407-08401-000 | 1 | WARNING-BUZZER CLAMP | 09407-08401-000 | 1 | 09407-08401-000 | 1 | 2 |
| - | - | EMERGENCY SWITCH PANEL | - | - | 37803-93J03-000 089 | 1 | 1 |
| 36625-98J10-000 076 | 1 | BATTERY LEAD | 36625-98J10-000 076 | 1 | - | - | 1 |
| 36770-98J10-000 067 | 1 | BOAT CONTROL MODULE (BCM) | 36770-98J10-000 067 | 1 | 36770-98J10-000 067 | 1 | 2 |
| 36775-98J00-000 068 | 1 | BCM HOLDER (L) | 36775-98J00-000 068 | 1 | 36775-98J00-000 068 | 1 | 2 |
| 36776-98J00-000 069 | 1 | BCM HOLDER (R) | 36776-98J00-000 069 | 1 | 36776-98J00-000 069 | 1 | 2 |
| 33911-88BL0-000 070 | 1 | BCM-CONNECT CAP | 33911-88BL0-000 070 | 1 | 33911-88BL0-000 070 | 1 | 2 |
| 33925-93J00-000 071 | 1 | BCM CUSHION | 33925-93J00-000 071 | 1 | 33925-93J00-000 071 | 1 | 2 |
| 36623-98J20-000 078 | 1 | BCM #1 WIRING HARNESS | 36623-98J20-000 078 | 1 | - | - | 1 |
| - | - | BCM #2 WIRING HARNESS | - | - | 36624-98J02-000 079 | 1 | 1 |
| 33926-98J00-000 077 | 2 | TERMINAL RESISTOR | 33926-98J00-000 077 | 2 | - | - | 2 |
| - | - | ENGINE WIRING HARNESS | - | - | - | - | - |
| - | - | DUAL-STATION WIRING HARNESS | - | - | 36622-98J00-000 075 | 1 | 1 |
| 09403-13402-000 | 10 | HARNESS CLAMP | 09403-13402-000 | 10 | 09403-13402-000 | 10 | 20 |
| 37860-87L00-000 093 | 1 | TROLL MODE SWITCH PANEL | 37860-87L00-000 093 | 1 | 37860-87L00-000 093 | 1 | 2 |

## REMOTE-CONTROL KIT for DUAL ENGINE

| SINGLE STATION | | STATION | DUAL STATION | | | | |
|---|---|---|---|---|---|---|---|
| 67000-98J28-000<br>-<br>DF150TG/ZG/175TG/ZG/250AP/300AP | QTY | BINNACLE-MOUNT CONTROL KIT<br>or<br>FLUSH-MOUNT CONTROL KIT<br>Applicable Model<br>Contents: | First Station<br>67000-98J28-000<br>DF150TG/ZG/175TG/ZG/250AP/300AP | + | Second Station<br>67000-98J38-000<br>DF150TG/ZG/175TG/ZG/250AP/300AP | | QTY |
| 67200-98J13-000 062<br>-<br>- | 1 | BINNACLE MOUNT R/C BOX<br>or<br>FLUSH MOUNT R/C BOX | 67200-98J13-000 062<br>-<br>- | 1 | 67200-98J13-000 062<br>-<br>- | 1 | 2 |
| 37100-98J03-000 063 | 1 | MAIN SWITCH PANEL | 37100-98J03-000 063 | 1 | - | - | 1 |
| 37100-98J21-000 065 | 1 | CONTROL PANEL | 37100-98J21-000 065 | 1 | 37100-98J21-000 065 | 1 | 2 |
| 38500-93J90-000 095 | 1 | WARNING BUZZER | 38500-93J90-000 095 | 1 | 38500-93J90-000 095 | 1 | 2 |
| 09407-08401-000 | 1 | WARNING-BUZZER CLAMP | 09407-08401-000 | 1 | 09407-08401-000 | 1 | 2 |
| - | - | EMERGENCY SWITCH PANEL | - | - | 37803-93J03-000 089 | 1 | 1 |
| 36625-98J10-000 076 | 1 | BATTERY LEAD | 36625-98J10-000 076 | 1 | - | - | 1 |
| 36770-98J10-000 067 | 1 | BOAT CONTROL MODULE (BCM) | 36770-98J10-000 067 | 1 | 36770-98J10-000 067 | 1 | 2 |
| 36775-98J00-000 068 | 1 | BCM HOLDER (L) | 36775-98J00-000 068 | 1 | 36775-98J00-000 068 | 1 | 2 |
| 36776-98J00-000 069 | 1 | BCM HOLDER (R) | 36776-98J00-000 069 | 1 | 36776-98J00-000 069 | 1 | 2 |
| - | - | BCM-CONNECT CAP | - | - | - | - | - |
| 33925-93J00-000 071 | 1 | BCM CUSHION | 33925-93J00-000 071 | 1 | 33925-93J00-000 071 | 1 | 2 |
| 36623-98J30-000 | 1 | BCM #1 WIRING HARNESS | 36623-98J30-000 | 1 | - | - | 1 |
| - | - | BCM #2 WIRING HARNESS | - | - | 36624-98J11-000 | 1 | 1 |
| 33926-98J00-000 077 | 2 | TERMINAL RESISTOR | 33926-98J00-000 077 | 2 | - | - | 2 |
| 36621-98J00-000 074 | 1 | ENGINE WIRING HARNESS | 36621-98J00-000 074 | 1 | - | - | 1 |
| - | - | DUAL-STATION WIRING HARNESS | - | - | 36622-98J00-000 075 | 1 | 1 |
| 09403-13402-000 | 15 | HARNESS CLAMP | 09403-13402-000 | 15 | 09403-13402-000 | 10 | 25 |
| 37860-87L00-000 093 | 1 | TROLL MODE SWITCH PANEL | 37860-87L00-000 093 | 1 | 37860-87L00-000 093 | 1 | 2 |

## REMOTE-CONTROL KIT for TRIPLE ENGINE

| SINGLE STATION | | STATION | DUAL STATION | | | | |
|---|---|---|---|---|---|---|---|
| 67000-98J48-000<br>-<br>DF150TG/ZG/175TG/ZG/250AP/300AP | QTY | BINNACLE-MOUNT CONTROL KIT<br>or<br>FLUSH-MOUNT CONTROL KIT<br>Applicable Model<br>Contents: | First Station<br>67000-98J48-000<br>DF150TG/ZG/175TG/ZG/250AP/300AP | + | Second Station<br>67000-98J58-000<br>DF150TG/ZG/175TG/ZG/250AP/300AP | | QTY |
| 67200-98J13-000 062<br>-<br>- | 1 | BINNACLE MOUNT R/C BOX<br>or<br>FLUSH MOUNT R/C BOX | 67200-98J13-000 062<br>-<br>- | 1 | 67200-98J13-000 062<br>-<br>- | 1 | 2 |
| 37100-98J03-000 063 | 1 | MAIN SWITCH PANEL | 37100-98J03-000 063 | 1 | - | - | 1 |
| 37100-98J31-000 066 | 1 | CONTROL PANEL | 37100-98J31-000 066 | 1 | 37100-98J31-000 066 | 1 | 2 |
| 38500-93J90-000 095 | 1 | WARNING BUZZER | 38500-93J90-000 095 | 1 | 38500-93J90-000 095 | 1 | 2 |
| 09407-08401-000 | 1 | WARNING-BUZZER CLAMP | 09407-08401-000 | 1 | 09407-08401-000 | 1 | 2 |
| - | - | EMERGENCY SWITCH PANEL | - | - | 37803-93J03-000 089 | 1 | 1 |
| 36625-98J10-000 076 | 1 | BATTERY LEAD | 36625-98J10-000 076 | 1 | - | - | 1 |
| 36770-98J10-000 067 | 1 | BOAT CONTROL MODULE (BCM) | 36770-98J10-000 067 | 1 | 36770-98J10-000 067 | 1 | 2 |
| 36775-98J00-000 068 | 1 | BCM HOLDER (L) | 36775-98J00-000 068 | 1 | 36775-98J00-000 068 | 1 | 2 |
| 36776-98J00-000 069 | 1 | BCM HOLDER (R) | 36776-98J00-000 069 | 1 | 36776-98J00-000 069 | 1 | 2 |
| - | - | BCM-CONNECT CAP | - | - | - | - | - |
| 33925-93J00-000 071 | 1 | BCM CUSHION | 33925-93J00-000 071 | 1 | 33925-93J00-000 071 | 1 | 2 |
| 36623-98J30-000 | 1 | BCM #1 WIRING HARNESS | 36623-98J30-000 | 1 | - | - | 1 |
| - | - | BCM #2 WIRING HARNESS | - | - | 36624-98J11-000 | 1 | 1 |
| 33926-98J00-000 077 | 2 | TERMINAL RESISTOR | 33926-98J00-000 077 | 2 | - | - | 2 |
| 36621-98J10-000 | 1 | ENGINE WIRING HARNESS | 36621-98J10-000 | 1 | - | - | 1 |
| - | - | DUAL-STATION WIRING HARNESS | - | - | 36622-98J00-000 075 | 1 | 1 |
| 09403-13402-000 | 18 | HARNESS CLAMP | 09403-13402-000 | 18 | 09403-13402-000 | 10 | 28 |
| 37860-87L00-000 093 | 1 | TROLL MODE SWITCH PANEL | 37860-87L00-000 093 | 1 | 37860-87L00-000 093 | 1 | 2 |

## REMOTE-CONTROL KIT for QUADRUPLE ENGINE

| SINGLE STATION | | STATION | DUAL STATION | | | | |
|---|---|---|---|---|---|---|---|
| 67000-98J70-000<br>-<br>DF150TG/ZG/175TG/ZG/250AP/300AP | QTY | BINNACLE-MOUNT CONTROL KIT<br>or<br>FLUSH-MOUNT CONTROL KIT<br>Applicable Model<br>Contents: | First Station<br>67000-98J70-000<br>DF150TG/ZG/175TG/ZG/250AP/300AP | + | Second Station<br>67000-98J80-000<br>DF150TG/ZG/175TG/ZG/250AP/300AP | | QTY |
| 67200-98J13-000 062<br>-<br>- | 1 | BINNACLE MOUNT R/C BOX<br>or<br>FLUSH MOUNT R/C BOX | 67200-98J13-000 062<br>-<br>- | 1 | 67200-98J13-000 062<br>-<br>- | 1 | 2 |
| 37100-98J03-000 063 | 1 | MAIN SWITCH PANEL | 37100-98J03-000 063 | 1 | - | - | 1 |
| 37100-98J21-000 065 | 2 | CONTROL PANEL | 37100-98J21-000 065 | 2 | 37100-98J21-000 065 | 2 | 4 |
| 38500-93J90-000 095 | 2 | WARNING BUZZER | 38500-93J90-000 095 | 2 | 38500-93J90-000 095 | 2 | 4 |
| 09407-08401-000 | 2 | WARNING-BUZZER CLAMP | 09407-08401-000 | 2 | 09407-08401-000 | 2 | 4 |
| - | - | EMERGENCY SWITCH PANEL | - | - | 37803-93J03-000 089 | 1 | 1 |
| 36625-98J10-000 076 | 2 | BATTERY LEAD | 36625-98J10-000 076 | 2 | - | - | 2 |
| 36770-98J20-000 | 2 | BOAT CONTROL MODULE (BCM) | 36770-98J20-000 | 2 | 36770-98J20-000 | 2 | 4 |
| 36775-98J00-000 068 | 2 | BCM HOLDER (L) | 36775-98J00-000 068 | 2 | 36775-98J00-000 068 | 2 | 4 |
| 36776-98J00-000 069 | 2 | BCM HOLDER (R) | 36776-98J00-000 069 | 2 | 36776-98J00-000 069 | 2 | 4 |
| - | - | BCM-CONNECT CAP | - | - | - | - | - |
| 33925-93J00-000 071 | 2 | BCM CUSHION | 33925-93J00-000 071 | 2 | 33925-93J00-000 071 | 2 | 4 |
| 36623-98J40-000 | 1 | BCM #1 WIRING HARNESS | 36623-98J40-000 | 1 | 36623-98J40-000 | 1 | 2 |
| - | - | BCM #2 WIRING HARNESS | - | - | - | - | - |
| 33926-98J00-000 077 | 4 | TERMINAL RESISTOR | 33926-98J00-000 077 | 4 | - | - | 4 |
| 36621-98J00-000 074 | 2 | ENGINE WIRING HARNESS | 36621-98J00-000 074 | 2 | - | - | 2 |
| - | - | DUAL-STATION WIRING HARNESS | - | - | 36622-98J00-000 | 2 | 2 |
| 09403-13402-000 | 20 | HARNESS CLAMP | 09403-13402-000 | 20 | 09403-13402-000 | 15 | 35 |
| 37860-87L00-000 093 | 1 | TROLL MODE SWITCH PANEL | 37860-87L00-000 093 | 1 | 37860-87L00-000 093 | 1 | 2 |

SUZUKI PRECISION CONTROL

# ELECTRONIC THROTTLE AND SHIFT SYSTEM

## MAIN SWITCH PANEL

**37100-98J03-000** 063

Single ignition with Emergency-stop switch

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## CONTROL PANEL

**37100-98J11-000** 064

for Single-Engine

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**37100-98J21-000** 065

for Dual-Engine

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**37100-98J31-000** 066

for Triple-Engine

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## BOAT CONTROL MODULE (BCM)

**36770-98J10-000** 067

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36770-98J20-000**

for Quadruple engines

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## BCM HOLDER (L/R)

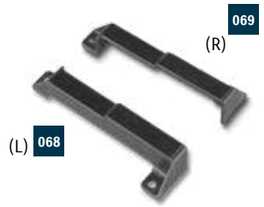


**36775-98J00-000** 068

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36776-98J00-000** 069

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## BCM-CONNECT CAP

**33911-88BL0-000** 070

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## BCM CUSHION

**33925-93J00-000** 071

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

# CONNECTION BETWEEN ENGINE AND CONTROL SYSTEM

## MAIN WIRING HARNESS

**36620-98J30-000** 072

6.5 meters for control system

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36620-98J40-000**

9.5 meters for control system

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## MAIN-WIRING-HARNESS EXTENSION

**36620-98J50-000** 073

2.0 meters for control system

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36620-98J5P-EC1**

6.5 meters for control system

Applicable Model DF150TG/ZG/175TG/ZG/

**36620-98J5P-EC2**

9.5 meters for control system

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP 250AP/300AP

## ENGINE WIRING HARNESS

**36621-98J00-000** 074

for Dual engines

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36621-98J10-000**

for Triple engines

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## DUAL-STATION WIRING HARNESS

**36622-98J00-000** 075

for Dual-station control system

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## BATTERY LEAD

**36625-98J10-000** 076

6.5 meters

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## TERMINAL RESISTOR

**33926-98J00-000** 077

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## BCM #1 WIRING HARNESS

**36623-98J20-000** 078

for Single engine and Single (First) station

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36623-98J30-000**

for Dual or Triple engines and Single (First) station

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36623-98J40-000**

for Quadruple engines

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

## BCM #2 WIRING HARNESS

**36624-98J02-000** 079

for Single engine and Second station

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

**36624-98J11-000**

for Dual or Triple engines and Second station

Applicable Model DF150TG/ZG/175TG/ZG/ 250AP/300AP

# MECHANICAL REMOTE CONTROL SYSTEM

## BINNACLE-MOUNT REMOTE CONTROL BOX

**67200-93J13-000** 080

Single-engine

Applicable Model DF8A-140AT/Z/150T/ Z/175T/Z/200T/Z-250T/Z

## BINNACLE-MOUNT REMOTE CONTROL BOX

**67200-93J23-000** 081

Dual-engine

Applicable Model DF100A-140AT/Z/150T/Z 175T/200T/Z-250T/Z

## FLUSH-MOUNT REMOTE CONTROL BOX

**67200-93J32-000** 082

Single-engine

Applicable Model DF25R-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

## SIDE-MOUNT REMOTE CONTROL BOX

**67200-91J04-000**

Single-engine

Applicable Model DF4-6

**67200-94J15-000** 083

Single-engine.With warning buzzer

Applicable Model DF8A-20A

**67200-93J50-000**

Single-engine.With PTT switch

Applicable Model DF9.9A/20A/40A-140AT/ Z/150T/Z/175T/Z/200T/Z-250T/Z

**67200-97E44-000**

Single-engine.With warning buzzer

Applicable Model DT25/30/40

## CONNECTION between ENGINE and CONTROL SYSTEM MAIN WIRING HARNESS

**36620-93J52-000**

5.0 meters for Control system

Applicable Model DF40A-140A/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

**36620-93J02-000** 086

6.5 meters for Control system

Applicable Model DF9.9A/20A/40A-140AT/ Z/150T/Z/175T/Z/200T/Z-250T/Z

**36620-93J62-000**

8.0 meters for Control system

Applicable Model DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

**36620-94J01-000**

6.5 meters for Control system without Monitor-signal wire, Trim-sender wire and PTT-SW wire

Applicable Model DF8A-25 forward control

## SPACER KIT for REMOTE CONTROL BOX

**67500-93J00-000** 084

for Single Binnacle-mount type

Applicable Model DF8A-140AT/Z/150T/ Z/175T/Z/200T/Z-250T/Z

**67500-93J10-000** 085

for Dual Binnacle-mount type

Applicable Model DF100A-140AT/Z/150T/Z 175T/200T/Z-250T/Z

## ADAPTER HARNESS & WARNING PANEL

**990C0-88802-HSM**

Warning light panel for digital gauges

## MAIN-WIRING-HARNESS EXTENSION

**36620-93J10-000**

2.0 meters for Control system

Applicable Model DF9.9A-20A/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

**36620-93J40-000**

3.0 meters for Control system

Applicable Model DF9.9A-20A/40A-140AT/ Z/150T/Z/175T/Z/200T/Z-250T/Z

## LOOMS

**36620-SPEC0-HSM**

Harness Main Special Length Available on request

**36620-SPEC1-05M**

Engine Loom 5M

**36620-SPEC2-08M**

Engine Loom 8M

**36620-SPEC3-12M**

Engine Loom 12M

# MECHANICAL REMOTE CONTROL SYSTEM

## SWITCH PANEL

## IGNITION SWITCH PANEL

**37100-96J00-000** 088
Single ignition
Applicable Model DF9.9A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

**37100-99E00-000**
Single ignition
Applicable Model DT30/R

## EMERGENCY SWITCH PANEL

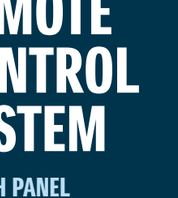


**37803-93J03-000** 089
Applicable Model DF9.9A-300AP

**37803-99E03-000**
Applicable Model DT30/R

## LIGHTING SWITCH PANEL




**37210-93J00-000** 090
Applicable Model DF9.9A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/ Z,DT30/R/40W/WR

## IGNITION SWITCH PANEL

**37100-96J23-000** 091
Single ignition with Emergency-stop switch
Applicable Model 15A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

## IGNITION SWITCH PANEL

**37100-96J13-000** 092
Dual ignition with Emergency-stop switch
Applicable Model DF100A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

## TROLL MODE SWITCH PANEL

**37860-87L00-000** 093
Applicable Model DF40A-140AT/Z/150TG/ ZG/175TG/ZG/250AP/300AP
Activates SUZUKI Troll Mode System and controls RPM from idling engine speed up to 1200rpm at every 50rpm.

## PTT SWITCH PANEL

**37805-93J00-000** 094
Applicable Model DF40A-140AT/Z/150T/Z/ 175T/Z/200T/Z-250T/Z

## WARNING BUZZER

**38500-93J90-000** 095
Applicable Model DF9.9A-300AP

## THRU-DECK-HOSE ATTACHMENT

**67300-90J00-000**
Applicable Model DF70A-140A

**67300-93J00-000** 096
Applicable Model DF150-300AP

## TWIN REMOCON ATTACHMENT KIT

**67140-95600-000** 097
Applicable Model DT9.9A-20A/40A-140AT/Z/ 150T/Z/175T/Z/200T/Z-250T/ Z,DT40W/WR

## BATTERY LEAD



**36625-93J10-000** 087
6.7 meters
Applicable Model DF70A-90A/150TZ/175T/ Z/200T/Z-250T/Z

# CONTROL CABLES

## REMOTE-CONTROL CABLE

**67320-93J00-008**
Remote Control Cable, 8’

**67320-93J05-009**
Remote Control Cable 9’

**67320-93J10-010**
Remote Control Cable 10’

**67320-93J15-011**
Remote Control Cable 11’

**67320-93J20-012**
Remote Control Cable 12’

**67320-93J25-013**
Remote Control Cable 13’

**67320-93J30-014**
Remote Control Cable 14’

**67320-93J35-015**
Remote Control Cable 15’

**67320-93J40-016**
Remote Control Cable 16’

**67320-93J45-017**
Remote Control Cable 17’

**67320-93J50-018**
Remote Control Cable 18’

**67320-93J55-019**
Remote Control Cable 19’

**67320-93J60-020**
Remote Control Cable 20’

**67320-93J65-021**
Remote Control Cable 21’

**67320-93J70-022**
Remote Control Cable 22’

**67320-93J75-023**
Remote Control Cable 23’

**67320-93J80-024**
Remote Control Cable 24’

**67320-93J85-025**
Remote Control Cable 25’

**67320-93J90-026**
Remote Control Cable 26’

**67320-93J95-027**
Remote Control Cable 27’

**67320-93JAA-028**
Remote Control Cable 28’

**67320-93JAB-029**
Remote Control Cable 29’

**67320-93JAC-030**
Remote Control Cable 30’

**67320-93JAD-032**
Remote Control Cable 32’

**67320-93JAE-034**
Remote Control Cable 34’

**67320-93JAF-036**
Remote Control Cable 36’

**67320-93JAG-038**
Remote Control Cable 38’

**67320-93JXX-040**
Remote Control Cable 40’

**67320-93JXX-042**
Remote Control Cable 42’

**67320-93JXX_ _ _**
Note:
Additional sizes available on request

## REMOTE-CONTROL ATTACHING KIT

Converts ME model to REMOTE-CONTROL model.

**67101-91J00-000** 099
Applicable Model DF4-6

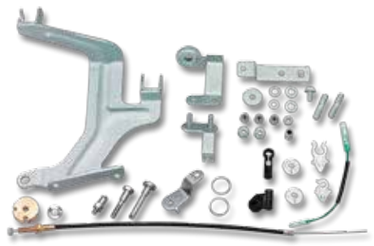

**67130-99J00-000**
CLAMP BRACKET SET (41100-99J00-0EP) is required for installing 67130-99J00-000.
Applicable Model DF8A/9.9A

**67130-89L01-000**
Applicable Model DF9.9A/15A/20A

**67130-95J02-000** 100
Applicable Model DF25

## CLAMP BRACKET SET

**41100-99J00-0EP**
Applicable Model DF8A/9.9A

# STEERING

## TILLER HANDLE KIT

### Main features

**Tachometer with warning indicators**

- Digital tachometer with indicators for the first time of all the tiller handles in the marine industry.
- The check pattern panel makes the digital tachometer display clearly visible.
- Reliable for the critical information from the warning indicators.
- 3 digits digital tachometer shows RPM during cruising or trolling.

**Shift lever**

- Round shape for comfortable grip.
- Moderate shifting feeling.

**63002-88L20-0EP** 101
Applicable Model DF40A/ 50A

**63002-88L10-0EP** 102
Applicable Model DF60A/60AV

**63002-87L11-0EP** 103
Applicable Model DF70A-90A

**63002-90J31-0EP** 104
with Adjustable Steering Damper
Applicable Model DF100A/115A

**Angle Adjustable Bracket**

- The angle adjustable bracket changes the basic handle position in three levels.
  That will help better handle positioning in accordance with user's boat.

**Troll mode switch**

- Activates SUZUKI Troll Mode System and controls RPM from idling engine speed up to 1200rpm at every 50rpm.

**Power trim & tilt switch and throttle grip friction adjuster**

- The PTT switch at the toe of the grip bar helps users to control the trim position and throttling at the same time.
- The throttle grip friction adjuster at the base of the grip bar supports user's throttle control.

## DUAL-ENGINE TIE-BAR

**67600-90J00-000** 106
Stainless steel
Applicable Model DF100A-140A

**67600-93J00-000**
Stainless steel
Applicable Model DF150T/Z/175T/Z/200T/ Z-250T/Z

## MISC

**99105-55-0055**
Optional Panther unit Power Trim and Tilt Assembly to suit up to 55HP
Suitable up to 40hp models

**99105-55-1200**
Push button assembly
Applicable Model 99105-55-0055 (Power Trim and Tilt Assembly)

**99105-55-55005**
Complete actuator and motor assembly
Applicable Model 99105-55-0055 (Power Trim and Tilt Assembly)

**99105-55-55022**
Relay control assembly
Applicable Model 99105-55-0055 (Power Trim and Tilt Assembly)

**99105-55-HYCL-001**
Outboard Stabilizer Clip Set
Applicable Model: All forward control engines/remote steering

## STEERING EXTENSION KIT

**67630-93J00-HSM** 107
for installation of DUAL-ENGINE TIE-BAR (67600-93J00-000)
Applicable Model DF150T/Z/175T/Z/200T/ Z-250T/Z

## STEERING CABLE SEAL

**41161-94400-000** 108
Applicable Model DF8A-250T/Z,DT25K-40WR

## STEERING-BRACKET ATTACHMENT

**43755-95J01-000**
Applicable Model DF25R
Used to connect DRAG LINK.

## DRAG-LINK KIT

**67700-87L01-000**
Applicable Model DF70A-90A

**67700-93J00-000**
Applicable Model DF40A-60A/200T/Z-250T/Z

**67700-95J01-000**
Applicable Model DF25R

**67700-96J00-000**
Applicable Model DF150-175

**67701-87J11-000**
Applicable Model DF40A-60A/200T/Z-250T/Z

**67701-87L01-000**
Applicable Model DF70A-90A

**67701-90J01-000**
Applicable Model DF100A-140A

**67701-95J00-000**
Applicable Model DF25R

**67701-96J00-000**
Applicable Model DF150-175

**67701-94420-000**
Applicable Model DT25/30/R

## TRIM SENDER ARM

**34801-99E04-HSM**
Replacement arm to suit trim sender assembly 34801-99E04-000

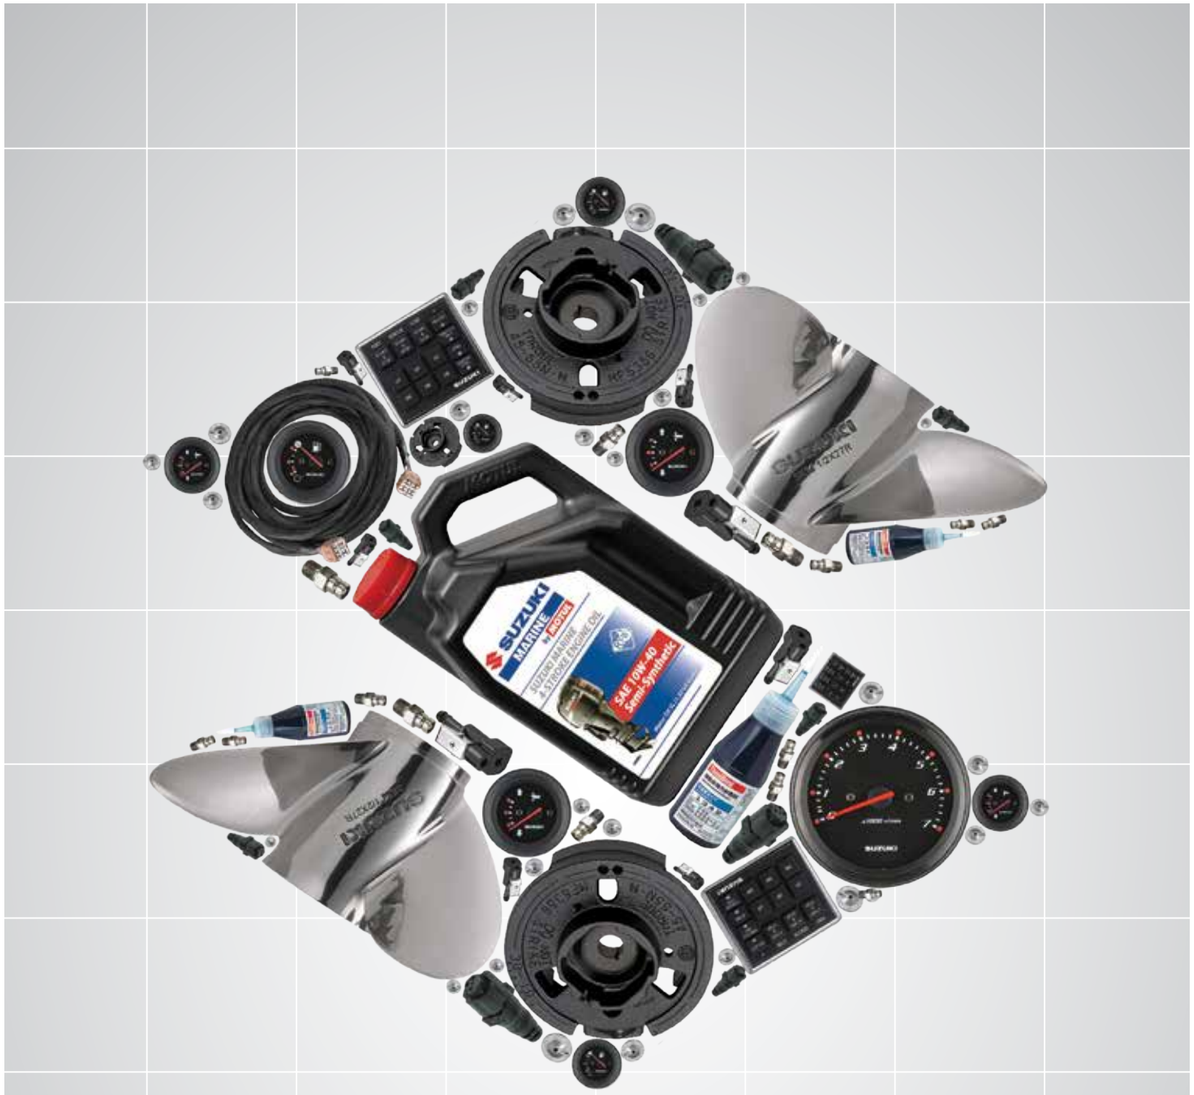


# Keep it real

## SUZUKI MARINE GENUINE SPARE PARTS

Suzuki Marine invests millions in research and development to engineer parts of superior, long lasting quality. Keep up the performance, keep your Warranty, use only genuine Suzuki Marine Spare Parts, and keep it real.

suzukimarine.com.au suzukimarine.co.nz

SUZUKI MARINE
WORLD'S BEST 4-STROKE



# ELECTRICAL PARTS

## ELECTRIC STARTER KIT

**31000-95J10-000** 109
Applicable Model DF25

**31000-99J00-000**
Applicable Model DF8A/9.9A

**31000-89L02-000**
Applicable Model 15A/20A
Converts MZ model into ME model.

## BATTERY CHARGING KIT

**32000-91J12-000**
80W
Applicable Model DF4-6

**32000-95J01-000**
80W
Applicable Model DF25/Q

**32000-99J00-000**
80W
Applicable Model DF8A/9.9A

**32000-89L00-000**
80W
Applicable Model DF9.9A/15A/20A

## COUNTER SELECT CONNECTOR

**36612-98J00-000**
Applicable Model DF300AP /250AP
Converts DF300AP/250AP to counter rotation specification.

## RECTIFIER SET

**32801-91J01-000** 110
Applicable Model DF4-6

**32801-95J01-000** 111
Applicable Model DF8A/9.9A/25

**32801-89L00-000**
Applicable Model 15A/20A

**32801-96304-000** 112
Applicable Model DT30

**32801-94402-000** 113
Applicable Model DT40W/40WR

## RECEPTACLE KIT

**39600-91J12-000**
Applicable Model DF4-6

**39600-94J01-000** 114
Applicable Model DF8A/9.9A

**39600-89L00-000**
Applicable Model DF15A/20A

**39600-95J01-000** 115
Applicable Model DF25

**39600-93910-000** 116
Applicable Model DT9.9A-40W/WR

## STARTER MOTOR SET

**31101-96320-0EP** 117
Applicable Model DT30

## BATTERY ISOLATOR LEAD SET

**33830-96J00-000** 118
Applicable Model DF150-175

**33830-98J10-000**
Applicable Model DF300AP/250AP

## STATOR & PULSER COIL COMPONENT

**32120-95J00-000** 119
12V, 180W
Applicable Model DF25
Raises the standard output (12V, 80W) to a larger output (12V, 120 or 180W).

## FLYWHEEL

**32102-96462-000** 120
Applicable Model DT30

## STARTING SWITCH & CABLE SET

**33800-96304-000** 121
Applicable Model DT30

# ANODE

## ZINC ANODE for saltwater

**55300-95500-000** 122
Applicable Model DF8A/9.9A/ 40A-60A,DT25K-40W

**55320-95311-000** 123
Applicable Model DF40A-60A/150-300AP

**55125-96310-000** 124
Applicable Model DF25R

**55321-90J01-000** 125
Applicable Model DF40A-60A/100A-140A

## ALUMINUM ANODE for brackish water, saltwater

**55321-87J00-000** 126
Applicable Model DF2.5-300AP, DT9.9A/15A

**55320-94900-000** 127
Applicable Model DF60A-300AP

**55321-95J00-000** 128
Applicable Model DF2.5/25R

**55321-93J00-000** 129
Applicable Model DF150-300AP

## MAGNESIUM ANODE for freshwater

**55321-87J10-000** 130
Applicable Model DF4-300AP,DT9.9A/15A

**55321-94910-000** 131
Applicable Model DF70A-300AP

# FUEL SYSTEM

## FUEL TANK

NOTE : These tanks do not meet US-EPA requirements.

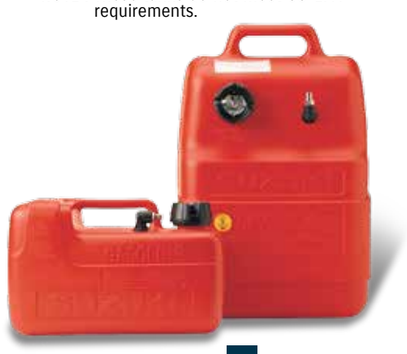

**65000-99100-000** 132
12-litre plastic tank with no fuel-level gauge
Applicable Model DF4/5/6, DT9.9A/15A/ 25/40W

**65000-95D01-000** 133
25-litre plastic tank with a fuel-level gauge
Applicable Model DF8A-140A

**65000-89L10-000**
12-litre plastic tank with a fuel-level gauge
Applicable Model DF8A-20A

## REPLACEMENT FUEL CAP

NOTE : These caps do not meet US-EPA requirements.

**65520-99100-000**
for 12-litre tank with no fuel-level gauge
Applicable Model DF5-20A

**65520-95D01-000**
for 25-litre tank with a fuel-level gauge
Applicable Model DF8A-140A

## FUEL-HOSE SOCKET

**65750-98505-000** 134
Metal, Inner diameter: 11.2 mm
Applicable Model DF4-20A/DT9.9/K-40W/WR

**65750-87J11-000** 135
Plastic, Inner diameter: 6.6 mm
Applicable Model DF4/8A-25R

**65750-95500-000** 136
Metal, Inner diameter: 13.0 mm
Applicable Model DF8A-140A, DT9.9A-40W/WR

## FUEL CONNECTOR (ENGINE SIDE)

**65720-986B0-000** 137
Plastic
Applicable Model DF4/25R

## FUEL CONNECTOR (TANK SIDE)

**65740-95D01-000** 138
Outer diameter: 13 mm, 1/4"NPT
Applicable Model DF8A-140A, DT9.9/40W/WR

**65740-99100-000** 138
Outer diameter: 11 mm, 1/4"NPT
Applicable Model DF8A-140A, DT9.9/40W/WR up to 2013

## SQUEEZE PUMP

**65770-99J01-000** 139
Small-in & Large-out
Applicable Model DF4-6/40WR

**65770-90J11-000**
Large-in & Large-out
Applicable Model DF9.9A-140A/40WR

**65770-93J11-000**
Large-in & Large-out
Applicable Model DF150-300AP

**65770-90L01-000**
Large-in & Small-out
Applicable Model DT9.9/15A/30/40W

## SQUEEZE PUMP (Meets US-EPA requirements.)

**65770-94J00-000**
Small-in & Large-out
Applicable Model DF4/6

**65770-90J01-000**
Large-in & Large-out
Applicable Model DF8A-25

**65770-93J02-000**
Large-in & Large-out
Applicable Model DF150-300AP

## FUEL-HOSE COMPONENT

**65700-94JD1-000**
for 12-litre plastic tank to engine
Applicable Model DF4-9.9A

**65700-93J02-000** 140
for fuel tank to engine
Applicable Model DF150-300AP

**65700-87J15-000**
for 25-litre plastic tank to engine
Applicable Model DF9.9A-25

**65700-90J14-000**
for 25-litre plastic tank to engine
Applicable Model DF40A-140A

**65700-95D04-000**
for 12-litre plastic tank to engine (gasoline)
Applicable Model DT9.9A

**65700-94415-000**
with fuel filter (gasoline)
Applicable Model DT9.9A

**FUEL-HOSE COMPONENT Chart**




| FUEL HOSE COMPONENT | | SOCKET | | | HOSE | | | | SQUEEZE PUMP | HOSE | | | | SOCKET | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Part Number | A Length (mm) | Material | B I/D (mm) | Part Number | C Length (mm) | | I/D (mm) | O/D (mm) | | D Length (mm) | | I/D (mm) | O/D (mm) | Material | E I/D (mm) | Part Number |
| 65700-94JD1-000 | 1970 | Plastic | 6.6 | 65750-87J11-000 | 700 | Large | 7.3 | 12.5 | 65770-99J00-000 | 1100 | Small | 5.3 | 10.5 | Metal | 11.2 | 65750-98505-000 |
| 65700-93J02-000 | 2370 | (no socket) | - | - | (no hose) | - | - | - | 65770-93J11-000 | 2250 | Large | 9.0 | 14.0 | (no socket) | - | - |
| 65700-87J15-000 | 1970 | Plastic | 6.6 | 65750-87J11-000 | 700 | | 7.3 | 12.5 | 65770-90J10-000 | 1100 | | 7.3 | 12.5 | Metal | 13 | 65750-95500-000 |
| 65700-90J14-000 | 1250 | (no socket) | - | - | (no hose) | - | - | - | 65770-90J10-000 | 1100 | | 7.3 | 12.5 | Metal | 13 | 65750-95500-000 |
| 65700-95D04-000 | 2550 | Metal | 13.0 | 65750-95500-000 | 300 | | 7.3 | 12.5 | 65770-99J00-000 | 2090 | | 5.3 | 10.5 | Metal | 11.2 | 65750-98505-000 |
| 65700-96362-000 | 2620 | Metal | 11.2 | 65750-98505-000 | 300 | | 5.3 | 10.5 | - | 2250 | | 7.3 | 12.5 | Metal | 13 | 65750-95500-000 |
| 65700-94415-000 | 3100 | Metal | 13.0 | 65750-95500-000 | 300 | | 7.3 | 12.5 | 65770-90J10-000 | 2600 | | 7.3 | 12.5 | - | - | - |
| 65700-94433-000 | 3100 | Plastic | 13.8 | 65750-94404-000 | 3000 | | 7.3 | 12.5 | - | - | | - | - | - | - | - |
| 65700-91J23-000 | 2000 | Plastic | 6.6 | 65750-87J11-000 | 700 | | 7.3 | 12.5 | 65770-94J00-000 | 1100 | | 5.3 | 10.5 | Metal | 11.2 | 65750-98505-000 |
| 65700-87J24-000 | 2000 | Plastic | 6.6 | 65750-87J11-000 | 700 | | 7.3 | 12.5 | 65770-90J00-000 | 1100 | | 7.3 | 12.5 | Metal | 13 | 65750-95500-000 |
| 65700-88L01-000 | 1280 | (no socket) | - | - | (no hose) | - | - | - | 65770-90J00-000 | 1100 | | 7.3 | 12.5 | Metal | 13 | 65750-95500-000 |

## WATER SEPARATOR / FUEL FILTER

10 micron water separating filter with removable bowl and alloy head

**99105-20005-WS1**
Element Fuel Filter Large

**99105-20005-WSASY**
Fuel Filter Assembly 90gph Large
Applicable to all models

**99105-20005-WSB**
Fuel Filter Bowl Clear with Viton Seal
Applicable to all models

**99105-20005-SKIT**
Water Screen Viton gasket and o-ring kit
Applicable to all models

**99105-20005-WSH**
Filter Head Assembly
Applicable to all models

# PROPELLER

## HARDWARE FOR PROPELLER

| Applicable Model | STOPPER | | PROPELLER BUSH | | HARDWARE KIT | Contents of HARDWARE KIT | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | SPACER | | | | SPACER | WASHER | NUT | COTTER PIN |
| DF2.5 | 57635-91JL0-000 | - | 58120-97JA0-000 | Press-In | N/A | - | - | 58130-91JL0-000 | 09204-03003-000 |
| DF4/5/6 | 57635-91JL0-000 | - | 58120-91J00-000 | Press-In | N/A | - | - | 58130-91JL0-000 | 09204-03003-000 |
| DF8A/9.9A | 57632-94J00-000 | - | 58120-93701-000 | Press-In | N/A | - | 09160-12066-000 | 09141-12005-000 | 09204-02004-000 |
| DF9.9A/15A/20A, DT9.9A/15A | 57632-94J00-000 | - | 58120-89L00-000 | Press-In | N/A | - | 09160-12066-000 | 09141-12005-000 | 09204-02004-000 |
| DF25 | 57632-95J00-000 | - | 58120-96401-000 | Press-In | 57630-96300-000 | 57633-96300-000 | 09160-14028-000 | 09141-14008-000 | 09204-03003-000 |
| DT25/30 | 57632-91L00-000 | - | 58120-96401-000 | Press-In | 57630-96300-000 | 57633-96300-000 | 09160-14028-000 | 09141-14008-000 | 09204-03003-000 |
| DT40 | 57632-92L00-000 | - | 58120-88L00-000 | Press-In | 57630-94300-000 | 57633-94300-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |
| DF40A/50A/60A | 57632-95320-000 | - | 58120-88L00-000 | Press-In | 57630-94300-000 | 57633-94300-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |
| DF60AV | 57635-90J01-000 | - | *58105-90J00-000 | Press-In | 57630-94500-000 | 57633-90J02-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |
| DF70A/80A/90A | 57632-87L00-000 | - | *58105-90J00-000 *58120-90J00-000 | Press-In | 57630-90J00-000 | 57633-90J02-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |
| DF100A/115A T model (Right-Hand-Rotation) | 57635-90J01-000 | 57632-90J00-000 | | | 57630-90J00-000 | 57633-90J02-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |
| DF115A Z model (Counter-Rotation) | 57635-92J01-000 | - | | | 57630-90J00-000 | 57633-90J02-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |
| DF140A | 57635-92J01-000 | - | | | 57630-90J00-000 | 57633-90J02-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |
| DF150-300AP | 57632-93L00-000 | - | ***58105-93J00-000 ****58105-93J10-000 | Press-In | 57630-92E00-000 | 57633-87D30-000 | 09160-18028-000 | 09141-18005-000 | 09204-03003-000 |

*58105-90J00 is for 58100-87Lxx, 58100-90Jxx, 58200-92J4x~92J9x and 58200-92JAx~92JDx.
**58120-90J00 is for 58200-90J0x~90J3x and 58200-92J0x~92J3x.
***58105-93J00 is for 58200-96Jxx.
****58105-93J10 is for 58200-93JXX, 58200-93Lxx and 58300-93Jxx.

*RR:Right-Hand-Rotation model, CR: Counter-Rotation model

| model | type | material | blade | diameter | pitch | rotation* | description | part number |
|---|---|---|---|---|---|---|---|---|
| **DF2.5** | A520 | Aluminum | 3 | 7 3/8 | 5 3/8 | RR | | 58110-97JA0-019 |
| **DF4** | C601 | Aluminum | 3 | 7 1/2 | 6 | RR | | 58110-91JL0-019 |
| **DF5** | C611 | Aluminum | 3 | 7 1/2 | 6 1/2 | RR | | 58110-91J10-019 |
| **DF6** | C701 | Aluminum | 3 | 7 1/2 | 7 | RR | | 58110-91J20-019 |
| **DF8A** | M701 | Aluminum | 3 | 9 1/4 | 7 | RR | | 58100-93703-019 |
| **DF9.9A** | M821 | Aluminum | 3 | 9 1/4 | 8 | RR | THICK | 58100-90L01-019 |
| | M901 | Aluminum | 3 | 9 1/4 | 9 | RR | | 58100-94J00-019 |
| | M911 | Aluminum | 3 | 9 1/4 | 9 | RR | THICK | 58100-90L11-019 |
| | M1001 | Aluminum | 3 | 9 1/4 | 10 | RR | | 58100-93733-019 |
| | M1011 | Aluminum | 3 | 9 1/4 | 10 | RR | THICK | 58100-90L21-019 |
| | M1101 | Aluminum | 3 | 9 1/4 | 11 | RR | | 58100-93743-019 |
| **DF9.9B** | | Aluminum | 4 | 10 | 5 | RR | High thrust | 58100-94JA0-019 |
| **DF9.9B** | | | | | | | | |
| **DF15A** | | Aluminum | 3 | 9 1/4 | 7 | RR | | 58100-89L00-019 |
| **DF20A** | | Aluminum | 3 | 9 1/4 | 8 | RR | THICK | 58100-90L40-019 |
| | | Aluminum | 3 | 9 1/4 | 9 | RR | | 58100-89L20-019 |
| **DT9.9A** | | Aluminum | 3 | 9 1/4 | 9 | RR | THICK | 58100-90L50-019 |
| **DT15A** | | Aluminum | 3 | 9 1/4 | 10 | RR | | 58100-89L30-019 |
| | | Aluminum | 3 | 9 1/4 | 10 | RR | THICK | 58100-90L60-019 |
| | | Aluminum | 3 | 9 1/4 | 11 | RR | | 58100-89L40-019 |
| | | Aluminum | 3 | 9 1/4 | 12 | RR | | 58100-89L50-019 |
| **DF25** | P911 | Aluminum | 3 | 10 1/4 | 9 | RR | THICK | 58100-96371-019 |
| **DT25** | P1001 | Aluminum | 3 | 10 1/4 | 10 | RR | | 58100-96411-019 |
| **DT30** | P1011 | Aluminum | 3 | 10 1/4 | 10 | RR | THICK | 58100-96471-019 |
| | P1101 | Aluminum | 3 | 10 1/4 | 11 | RR | | 58100-96421-019 |
| | P1201 | Aluminum | 3 | 10 1/4 | 12 | RR | | 58100-91L00-019 |
| | P1211 | Aluminum | 3 | 10 1/4 | 12 | RR | THICK | 58100-96481-019 |
| | P1301 | Aluminum | 3 | 10 1/4 | 13 | RR | | 58100-91L10-019 |
| | P1311 | Aluminum | 3 | 10 1/4 | 13 | RR | THICK | 58100-96491-019 |
| | P1401 | Aluminum | 3 | 10 1/4 | 14 | RR | | 58100-95D01-019 |
| | P1501 | Aluminum | 3 | 10 1/4 | 15 | RR | | 58100-96461-019 |
| **DT25/30** | PS1300 | Stainless | 3 | 10 1/4 | 13 | RR | | 58200-96400-000 |
| **DF40A** | S900 | Aluminum | 3 | 11 1/2 | 9 | RR | | 58100-88L03-019 |
| **DF50A** | S1000 | Aluminum | 3 | 11 1/2 | 10 | RR | | 58100-88L13-019 |
| **DF60A** | S1100 | Aluminum | 3 | 11 1/2 | 11 | RR | | 58100-88L23-019 |
| **DT40** | S1200 | Aluminum | 3 | 11 5/8 | 12 | RR | | 58100-88L32-019 |
| | S1301 | Aluminum | 3 | 11 1/2 | 13 | RR | | 58100-88LB0-019 |
| | S1400 | Aluminum | 3 | 11 3/8 | 14 | RR | | 58100-88L52-019 |
| | S1500 | Aluminum | 3 | 11 1/4 | 15 | RR | | 58100-88L62-019 |
| | S1600 | Aluminum | 3 | 11 1/8 | 16 | RR | | 58100-88L72-019 |
| | S1700 | Aluminum | 3 | 11 | 17 | RR | | 58100-88L83-019 |
| | SS1600 | Stainless | 3 | 11 1/8 | 16 | RR | | 58200-88L30-000 |
| **DF60AV** | | Aluminum | 3 | 14 | 9 | RR | | 58100-87L91-019 |
| | | Aluminum | 3 | 14 | 11 | RR | | 58100-87LH0-019 |
| | | Aluminum | 3 | 13 3/4 | 12 | RR | | 58100-87LJ0-019 |
| | | Aluminum | 3 | 14 | 13 | RR | | 58100-87LA0-019 |
| | | Aluminum | 3 | 13 7/8 | 15 | RR | | 58100-87LB0-019 |
| | | Aluminum | 3 | 13 3/4 | 17 | RR | | 58100-87LC0-019 |

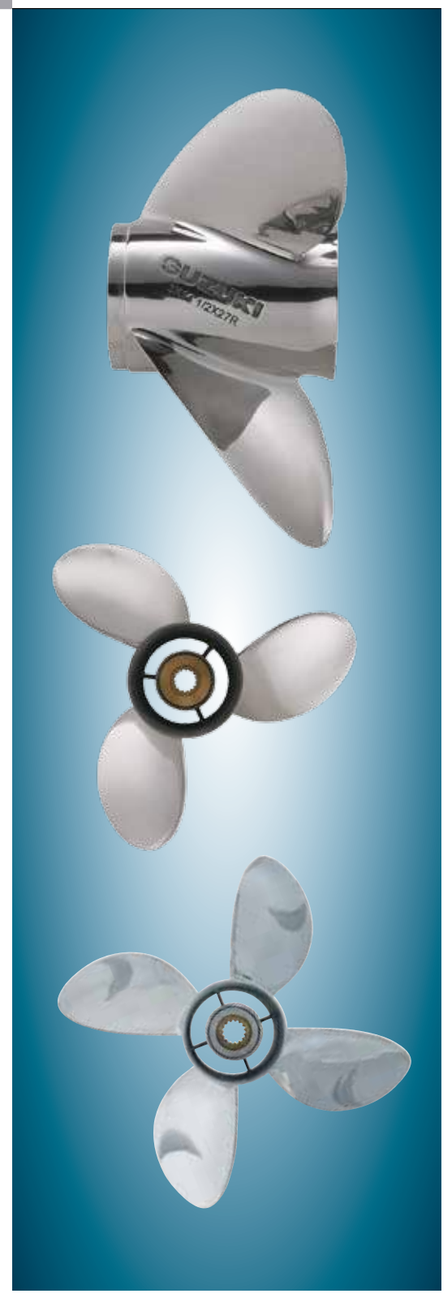


| model | material | blade | diameter | pitch | rotation* | part number |
|---|---|---|---|---|---|---|
| **DF70A** | Aluminum | 3 | 14 | 13 | RR | 58100-87LA0-019 |
| **DF80A** | Aluminum | 3 | 13 7/8 | 15 | RR | 58100-87LB0-019 |
| | Aluminum | 3 | 13 3/4 | 17 | RR | 58100-87LC0-019 |
| **DF90A** | Aluminum | 3 | 13 3/4 | 19 | RR | 58100-87LD0-019 |
| | Aluminum | 3 | 13 3/4 | 21 | RR | 58100-87LE0-019 |
| | Aluminum | 3 | 13 3/4 | 23 | RR | 58100-87L50-019 |
| | Aluminum | 3 | 13 1/2 | 15 | RR | 58100-90JE0-019 |
| | Aluminum | 3 | 14 | 17 | RR | 58100-90JA0-019 |
| | Aluminum | 3 | 14 | 19 | RR | 58100-90JB0-019 |
| | Aluminum | 3 | 14 | 21 | RR | 58100-90JC0-019 |
| | Aluminum | 3 | 14 | 23 | RR | 58100-90JD0-019 |
| | Stainless | 3 | 14 1/4 | 18 | RR | 58200-90J00-000 |
| | Stainless | 3 | 14 1/4 | 20 | RR | 58200-90J10-000 |
| | Stainless | 3 | 14 1/4 | 22 | RR | 58200-90J20-000 |
| | Stainless | 3 | 14 1/4 | 24 | RR | 58200-90J30-000 |
| | Stainless | 3 | 13 7/8 | 15 | RR | 58200-92J40-000 |
| | Stainless | 3 | 13 7/8 | 17 | RR | 58200-92J50-000 |
| | Stainless | 3 | 13 7/8 | 19 | RR | 58200-92J60-000 |
| | Stainless | 3 | 13 7/8 | 21 | RR | 58200-92J70-000 |
| | Stainless | 3 | 13 7/8 | 23 | RR | 58200-92J80-000 |
| | Stainless | 3 | 13 7/8 | 25 | RR | 58200-92J90-000 |
| **DF100A** | Aluminum | 3 | 13 1/2 | 15 | RR | 58100-90JE0-019 |
| **DF115A** | Aluminum | 3 | 14 | 17 | RR | 58100-90JA0-019 |
| **DF140A** | Aluminum | 3 | 14 | 19 | RR | 58100-90JB0-019 |
| | Aluminum | 3 | 14 | 21 | RR | 58100-90JC0-019 |
| | Aluminum | 3 | 14 | 23 | RR | 58100-90JD0-019 |
| | Stainless | 3 | 14 1/4 | 18 | RR | 58200-90J00-000 |
| | Stainless | 3 | 14 1/4 | 20 | RR | 58200-90J10-000 |
| | Stainless | 3 | 14 1/4 | 22 | RR | 58200-90J20-000 |
| | Stainless | 3 | 14 1/4 | 24 | RR | 58200-90J30-000 |
| | Stainless | 3 | 14 1/4 | 18 | CR | 58200-92J00-000 |
| | Stainless | 3 | 14 1/4 | 20 | CR | 58200-92J10-000 |
| | Stainless | 3 | 14 1/4 | 22 | CR | 58200-92J20-000 |
| | Stainless | 3 | 14 1/4 | 24 | CR | 58200-92J30-000 |
| | Stainless | 3 | 13 7/8 | 15 | RR | 58200-92J40-000 |
| | Stainless | 3 | 13 7/8 | 17 | RR | 58200-92J50-000 |
| | Stainless | 3 | 13 7/8 | 19 | RR | 58200-92J60-000 |
| | Stainless | 3 | 13 7/8 | 21 | RR | 58200-92J70-000 |
| | Stainless | 3 | 13 7/8 | 23 | RR | 58200-92J80-000 |
| | Stainless | 3 | 13 7/8 | 25 | RR | 58200-92J90-000 |
| | Stainless | 3 | 13 7/8 | 17 | CR | 58200-92JA0-000 |
| | Stainless | 3 | 13 7/8 | 19 | CR | 58200-92JB0-000 |
| | Stainless | 3 | 13 7/8 | 21 | CR | 58200-92JC0-000 |
| | Stainless | 3 | 13 7/8 | 23 | CR | 58200-92JD0-000 |

| model | material | blade | diameter | pitch | rotation* | part number |
|---|---|---|---|---|---|---|
| **DF150** | Stainless | 3 | 16 | 15 | RR | 58200-93L80-000 |
| **DF175** | Stainless | 3 | 16 | 17 | RR | 58200-93L00-000 |
| **DF200** | Stainless | 3 | 16 | 18 1/2 | RR | 58200-93L10-000 |
| **DF225** | Stainless | 3 | 16 | 20 | RR | 58200-93L20-000 |
| **DF250** | Stainless | 3 | 16 | 21 1/2 | RR | 58200-93L30-000 |
| **DF250AP** | Stainless | 3 | 16 | 23 | RR | 58200-93L40-000 |
| **DF300AP** | Stainless | 3 | 16 | 24 1/2 | RR | 58200-93L50-000 |
| | Stainless | 3 | 16 | 26 | RR | 58200-93L60-000 |
| | Stainless | 3 | 16 | 27 1/2 | RR | 58200-93L70-000 |
| | Stainless | 3 | 16 | 15 | CR | 58200-93LE0-015 |
| | Stainless | 3 | 16 | 17 | CR | 58200-93LE0-000 |
| | Stainless | 3 | 16 | 18 1/2 | CR | 58200-93LA0-000 |
| | Stainless | 3 | 16 | 20 | CR | 58200-93LB0-000 |
| | Stainless | 3 | 16 | 21 1/2 | CR | 58200-93LC0-000 |
| | Stainless | 3 | 16 | 23 | CR | 58200-93LD0-000 |
| | Stainless | 3 | 16 | 24 1/2 | CR | 58200-93LF0-000 |
| | Stainless | 3 | 16 | 26 | CR | 58200-93LG0-000 |
| | Stainless | 3 | 15 1/2 | 17 | RR | 58200-96J00-000 |
| | Stainless | 3 | 15 1/4 | 19 | RR | 58200-96J10-000 |
| | Stainless | 3 | 15 | 21 | RR | 58200-96J20-000 |
| | Stainless | 3 | 14 3/4 | 23 | RR | 58200-96J30-000 |
| | Stainless | 3 | 14 1/2 | 25 | RR | 58200-96J40-000 |
| | Stainless | 3 | 14 1/2 | 27 | RR | 58200-96J50-000 |
| | Stainless | 3 | 15 1/2 | 17 | CR | 58200-96JA0-000 |
| | Stainless | 3 | 15 1/4 | 19 | CR | 58200-96JB0-000 |
| | Stainless | 3 | 15 | 21 | CR | 58200-96JC0-000 |
| | Stainless | 3 | 14 3/4 | 23 | CR | 58200-96JD0-000 |
| | Stainless | 3 | 14 1/2 | 25 | CR | 58200-96JE0-000 |
| | Stainless | 3 | 14 1/2 | 27 | CR | 58200-96JF0-000 |
| | Stainless | 4 | 15 1/4 | 18 | RR | 58300-93J00-000 |
| | Stainless | 4 | 15 1/4 | 20 | RR | 58300-93J10-000 |
| | Stainless | 4 | 15 1/4 | 22 | RR | 58300-93J20-000 |
| | Stainless | 4 | 15 1/4 | 24 | RR | 58300-93J30-000 |
| | Stainless | 4 | 15 1/4 | 26 | RR | 58300-93J40-000 |
| | Stainless | 4 | 15 1/4 | 20 | CR | 58300-93JA0-000 |
| | Stainless | 4 | 15 1/4 | 22 | CR | 58300-93JB0-000 |
| | Stainless | 4 | 15 1/4 | 24 | CR | 58300-93JC0-000 |
| | Stainless | 4 | 15 1/4 | 26 | CR | 58300-93JD0-000 |

# CARE ITEM

## SPLASH COVERS

**99105-65000-ELT**
Cover outboard splash
Applicable Model DF30 electric start up to 2007

**99105-65000-MAN**
Cover outboard splash
Applicable Model DF30 manual start up to 2007

**99105-65001-HSM**
Cover outboard splash
Applicable Model DF40/50 up to 2009

**99105-65002-HSM**
Cover outboard splash
Applicable Model DF60/70 up to 2009

**99105-65003-HSM**
Cover outboard splash
Applicable DF90/100/115 up to 2012

**99105-65004-HSM**
Cover outboard full
Applicable DF140 up to 2012

**99105-65005-HSM**
Cover outboard splash
Applicable Model DF200/225/250

**99105-65005-SPECX**
Cover outboard full combo
Applicable Model DF200/225/250 X (25")

**99105-65005-SPECXX**
Cover outboard full combo
Applicable Model DF200/225/250 XX (30")

**99105-65006-HSM**
Cover outboard splash
Applicable Model DF150/175

**99105-65006-SPECL**
Cover outboard full combo
Applicable Model DF150/175 L (20")

**99105-65006-SPECX**
Cover outboard full combo
Applicable Model DF150/175 X (25")

**99105-65007-HSM**
Cover outboard splash
Applicable Model DF4/5/6

**99105-65008-HSM**
Cover outboard splash
Applicable Model DF250AP/300/300AP

**99105-65008-SPECX**
Cover outboard full combo
Applicable Model DF250AP/300/300AP X (25")

**99105-65008-SPECXX**
Cover outboard full combo
Applicable Model DF250AP/300/300AP XX (30")

**99105-65009-HSM**
Cover outboard splash
Applicable DF15

**99105-65010-ELT**
Cover outboard splash
Applicable Model DF25 V-Twin Electric Start

**99105-65010-MAN**
Cover outboard splash
Applicable Model DF25 V-Twin Manual Start

**99105-65011-HSM**
Cover outboard splash
Applicable Model DT30

**99105-65012-FCL**
Cover outboard full combo
Applicable Model DF70/80/90A L (20")

**99105-65012-HSM**
Cover outboard splash
Applicable Model DF70/80/90A

**99105-65012-SPECL**
Cover outboard full combo
Applicable Model DF70A/80A/90A L

**99105-65012-SPECL**
Cover outboard full combo
Applicable Model DF70A/80A/90A L
with hydrofoil

**99105-65012-SPECX**
Cover outboard full combo
Applicable Model DF70A/80A/90A X

**99105-65013-HSM**
Cover outboard splash
Applicable Model DT40

**99105-65013-SPECL**
Cover outboard full combo
Applicable Model DT40 with hydrofoil

**99105-65014-HSM**
Cover outboard splash
Applicable Model DF8A/9.9A

**99105-65014-SPECL**
Cover outboard full combo
Applicable Model DF8A/9.9A L (20")

**99105-65015-HSM**
Cover outboard splash
Applicable Model DF40A/50A/60A

**99105-65015-SPECL**
Cover outboard full combo
Applicable DF40A/50A/60A L (20")

**99105-65016-HSM**
Cover outboard splash
Applicable Model DT9.9/15 up to 2013

**99105-65017-HSM**
Cover outboard splash
Applicable Model DF2.5 up to 2013

**99105-65018-FCL**
Cover outboard full
Applicable Model DF15A/20A L (20")

**99105-65018-FCS**
Cover outboard full
Applicable Model DF15A/20A S (15")

**99105-65018-HSM**
Cover outboard splash
Applicable Model DF15A/20A

**99105-65018-SPECS**
Cover outboard full combo
Applicable DF15A/20A S (15")

**99105-65019-HSM**
Cover outboard splash
Applicable Model DF100A/115A/140A

**99105-65019-SPECX**
Cover outboard full combo
Applicable Model DF100A/115A/140A X (25")

**99105-65020-HSM**
Cover outboard splash
Applicable Model DT9.9A/15A

**99105-65020-SPECS**
Cover outboard full combo
Applicable Model DT9.9A/15A S (15")

Note: Additional Splash Covers on request

## 2 STROKE OILS

**99000-21250-BOTTLE**
1L Dispenser Bottle for CCI Super

**99000-21250-HSM**
CCI Super Package 2 x 1L CCI Super Oil 2 Stroke

**99000-21260-000-DG**
CCI Super 4LX6 Carton

**99000-21260-EA-DG**
Suzuki Super CCI 4L

**99000-21250-EA-DG**
CCI Super Oil 1L

**MOT19-435-05-DG**
Motul Outboard 2T SYNTHETIC 5Ltr

## 4 STROKE OILS

**MOT19-451-01-DG**
Suzuki Marine Oil 4T 10W40 FC-W 1Ltr

**MOT19-451-05-DG**
Suzuki Marine Oil 4T 10W40 FC-W 5Ltr

**MOT19-451-60-DG**
Suzuki Marine Oil 4T 10W40 FC-W 60Ltr

**MOT19-451-208-DG**
Suzuki Marine Oil 4T 10W40 FC-W 208Ltr

## CARE ITEMS

**MOT16-701-00-DG**
Motul Brake Clean 400mL

**MOT16-702-00-DG**
Motul Shine & Go Silicone Clean 400mL

**MOT16-703-00-DG**
(Aerosol) Ez Lube Multiprotect 250mL

**MOT16-711-00-DG**
Carbu Clean 400mL

**MOT16-714-00-DG**
Motul Valve Expert 250mL

**MOT16-715-00-DG**
Motul Parts Clean 840mL

**MOT16-830-004-DG**
Tech Grease 300 400mL

**MOT18-840-00-DG**
Engine Clean 300mL

**MOT18-841-00-DG**
Diesel/Fuel System Clean 300mL

## GEAR OIL

**MOT16-501-01-DG**
Motul Gear Oil 300 1L

**MOT19-501-01-DG**
Suzuki Marine Gear Oil GL-5 1Ltr

**MOT19-501-60-DG**
Suzuki Marine Gear Oil GL-5 60Ltr

## SUZUKI APPROVED GENUINE OIL by MOTUL

Suzuki and MOTUL have been in partnership in MotoGP since 1988. Extending this trusted relationship led to the development of new Suzuki Marine Oils. These ranges of oils have excellent oxidation stability and provide outstanding rust protection under severe operating conditions.

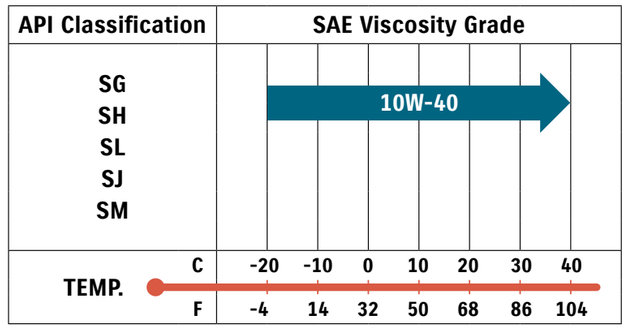

**MOT19-451-05-DG**

**4-STROKE ENGINE OIL** 163
SAE 10W-40 Semi-Synthetic
5 litre FCW

## GREASE

**99000-25011-000** 154
SUPER GREASE-A
450 grams (15.8 oz) for Crank oil seal

**99000-25350-000** 155
WATER RESISTANT GREASE EP2
250 grams (8.8 oz)

**99000-25140-000** 156
MOLY PASTE
50 grams (1.7 oz)

## LIQUID GASKET

**93691-80030-000** 158
SILICONE SEAL KE45T
100 grams

**99000-31140-000** 159
1207B (BLACK)
100 grams (3.4 oz)

## THREAD LOCK

**99000-32020-000** 160
1333B (RED)
50 grams (1.7 oz)

**99000-32160-000** 161
1342 (BLUE)
50 grams (1.7 oz)

# MAINTENANCE ITEM

## PTT FLUID

**99000-22810-000** 157
Metal can with a cap
1 liter

## PAINT

**99999-10109-0EP-EA-DG**
Pressure Pack Suzuki Shaddow Black
Spray Paint Single Can

## GEAR OIL

**99000-22B22-000** 153
HYPOID GEAR OIL SAE90 API GL-5
400ml

**MOT19-502-035**
Gear Oil
SAE 90, API GL-5
0.35 litre

## FLUSH-HOSE ATTACHMENT

**55181-95200-000** 149
Applicable Model DF4-6/40A-60A, DT25/30/40W

**17917-87L00-000** 150
Applicable Model DF8A-300A

## APPLICATION CHART

| page | Part Name / Description | | | DF250AP/300AP | DF200/225/250 | DF150TG(ZG)/175TG(ZG) | DF150/175 | DF140A | DF100A/115A | DF70A/80A/90A | DF40A/50A/60A | DF25 | DF9.9B/15A/20A | DF8A/9.9A | DF4/5/6 | DT40 | DT25/30 | DT9.9/15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 22 | **REMOTE CONTROL BOX** | | | | | | | | | | | | | | | | | |
| | Binnacle-mount | for Single-Engine | | 67200-98J03-000 060 | 67200-93J13-000 080 | 67200-98J03-000 | 67200-93J13-000 080 | 67200-93J13-000 080 | 67200-93J13-000 080 | 67200-93J13-000 080 | 67200-93J13-000 080 | 67200-93J13-000 080 | 67200-93J13-000 080 | 67200-93J13-000 080 | - | - | - | - |
| | | for Dual-Engine | | 67200-98J13-000 062 | 67200-93J23-000 081 | 67200-98J13-000 | 67200-93J23-000 081 | 67200-93J23-000 081 | 67200-93J23-000 081 | - | - | - | - | - | - | - | - | - |
| | Flush-mount | for Single-Engine | | 67200-98J22-000 061 | 67200-93J32-000 082 | 67200-98J22-000 | 67200-93J32-000 082 | 67200-93J32-000 082 | 67200-93J32-000 082 | 67200-93J32-000 082 | 67200-93J32-000 082 | 67200-93J32-000 082 | - | - | - | - | - | - |
| | Side-mount | for Single-Engine | | - | 67200-93J06-000 | - | 67200-93J06-000 | 67200-93J06-000 | 67200-93J06-000 | 67200-93J06-000 | 67200-93J06-000 | 67200-94J15-000 083 | 67200-94J15-000 083 | 67200-94J15-000 083 | 67200-91J04-000 083 | 67200-97E44-000 | 67200-97E44-000 | - |
| 22 | **Binnacle-mount REMOTE CONTROL KIT** | | | | | | | | | | | | | | | | | |
| | for Single-Engine | + Single-station | without Gauge | 67000-98J08-000 | 67000-93J04-000 | 67000-98J08-000 | 67000-93J04-000 | 67000-93J04-000 | 67000-93J04-000 | 67000-93J04-000 | 67000-93J04-000 | - | - | - | - | - | - | - |
| | | | with Gauge | - | 67000-93J47-000 | - | 67000-93J47-000 | 67000-93J47-000 | 67000-93J47-000 | 67000-93J47-000 | 67000-93J47-000 | - | - | - | - | - | - | - |
| | | + Second-station | without Gauge | 67000-98J18-000 | - | 67000-98J18-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | for Dual-Engine | + Single-station | without Gauge | 67000-98J28-000 | 67000-93J14-000 | 67000-98J28-000 | 67000-93J14-000 | 67000-93J14-000 | 67000-93J14-000 | - | - | - | - | - | - | - | - | - |
| | | | with Gauge | - | 67000-93J57-000 | - | 67000-93J57-000 | 67000-93J57-000 | 67000-93J57-000 | - | - | - | - | - | - | - | - | - |
| | | + Second-station | without Gauge | 67000-98J38-000 | - | 67000-98J38-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | for Triple-Engine | + Single-station | without Gauge | 67000-98J48-000 | - | 67000-98J48-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | | | with Gauge | - | - | - | - | - | - | - | - | - | | | | | | |
| | | + Second-station | without Gauge | 67000-98J58-000 | - | 67000-98J58-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | for Quad-Engine | + Single-station | without Gauge | 67000-98J70-000 | - | 67000-98J70-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | | | with Gauge | - | - | - | - | - | - | - | - | - | | | | | | |
| | | + Second-station | without Gauge | 67000-98J80-000 | - | 67000-98J80-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| 22 | **Flush-mount REMOTE CONTROL KIT** | | | | | | | | | | | | | | | | | |
| | for Single-Engine | + Single-station | | 67000-98J67-000 | 67000-93J25-000 | 67000-98J67-000 | 67000-93J25-000 | 67000-93J25-000 | 67000-93J25-000 | - | - | - | - | - | - | - | - | - |
| | | | | | 67000-93J68-000 | - | 67000-93J68-000 | 67000-93J68-000 | 67000-93J68-000 | | | | | | | | | |
| 23 | **Side-mount REMOTE CONTROL KIT** | | | | | | | | | | | | | | | | | |
| | for Single-Engine | + Single-station | | - | 67000-93J78-000 | - | 67000-93J78-000 | 67000-93J78-000 | 67000-93J78-000 | 67000-93J78-000 | 67000-93J78-000 | - | - | - | - | - | - | - |
| 22 | **SPACER KIT for REMOTE CONTROL BOX** | | | | | | | | | | | | | | | | | |
| | for Single Binnacle-mount type | | | - | 67500-93J00-000 084 | - | 67500-93J00-000 084 | 67500-93J00-000 084 | 67500-93J00-000 084 | 67500-93J00-000 084 | 67500-93J00-000 084 | 67500-93J00-000 084 | 67500-93J00-000 084 | 67500-93J00-000 084 | - | - | - | - |
| | for Dual Binnacle-mount type | | | - | 67500-93J10-000 085 | - | 67500-93J10-000 085 | 67500-93J10-000 085 | 67500-93J10-000 085 | - | - | - | - | - | - | - | - | - |
| 26 | **REMOTE-CONTROL CABLE** | | | - | See page 26 | - | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 | See page 26 |
| 26 | **REMOTE-CONTROL ATTACHING KIT** | | | - | - | - | - | - | - | - | - | 67130-95J02-000 100 | 67130-89L01-000 | 67130-99J00-000 | 67101-91J00-000 099 | - | - | - |
| 21 | **MAIN WIRING HARNESS** | | | | | | | | | | | | | | | | | |
| | 5.0 meters | | | - | 36620-93J52-000 | - | 36620-93J52-000 | 36620-93J52-000 | 36620-93J52-000 | 36620-93J52-000 | 36620-93J52-000 | - | - | - | - | - | - | - |
| | 6.5 meters | | | 36620-98J30-000 072 | 36620-93J02-000 086 | 36620-98J30-000 | 36620-93J02-000 086 | 36620-93J02-000 086 | 36620-93J02-000 086 | 36620-93J02-000 086 | 36620-93J02-000 086 | 36620-94J01-000 | 36620-94J01-000 | 36620-94J01-000 | - | 36620-94J01-000 | - | - |
| | 8.0 meters | | | - | 36620-93J62-000 | - | 36620-93J62-000 | 36620-93J62-000 | 36620-93J62-000 | 36620-93J62-000 | 36620-93J62-000 | - | - | - | - | - | - | - |
| | 9.5 meters | | | 36620-98J40-000 | - | 36620-98J40-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| 21 | **MAIN-WIRING-HARNESS EXTENSION** | | | | | | | | | | | | | | | | | |
| | 2.0 meters | | | 36620-98J50-000 073 | 36620-93J10-000 | 36620-98J50-000 | 36620-93J10-000 | 36620-93J10-000 | 36620-93J10-000 | 36620-93J10-000 | 36620-93J10-000 | 36620-93J10-000 | 36620-93J10-000 | - | - | - | - | - |
| | 3.0 meters | | | - | 36620-93J40-000 | - | 36620-93J40-000 | 36620-93J40-000 | 36620-93J40-000 | 36620-93J40-000 | 36620-93J40-000 | 36620-93J40-000 | 36620-93J40-000 | - | - | - | - | - |
| 25 | **BATTERY LEAD** | | | 36625-98J10-000 076 | 36625-93J10-000 087 | 36625-98J10-000 | 36625-93J10-000 087 | - | - | - | - | - | - | - | - | - | - | - |
| 24 | **IGNITION SWITCH PANEL** | | | | | | | | | | | | | | | | | |
| | Single ignition | | | - | 37100-96J00-000 088 | - | 37100-96J00-000 088 | 37100-96J00-000 088 | 37100-96J00-000 088 | 37100-96J00-000 088 | 37100-96J00-000 088 | 37100-96J00-000 088 | 37100-96J00-000 088 | - | - | - | 37100-99E00-000 | - |
| | Single ignition + Emergency-stop switch | | | - | 37100-96J23-000 091 | - | 37100-96J23-000 091 | 37100-96J23-000 091 | 37100-96J23-000 091 | 37100-96J23-000 091 | 37100-96J23-000 091 | 37100-96J23-000 091 | 37100-96J23-000 091 | - | - | 37100-96J23-000 091 | - | - |
| | Dual ignition + Emergency-stop switch | | | - | 37100-96J13-000 092 | - | 37100-96J13-000 092 | 37100-96J13-000 092 | 37100-96J13-000 092 | - | - | - | - | - | - | - | - | - |
| 20 | **MAIN SWITCH PANEL** | | | 37100-98J03-000 063 | - | 37100-98J03-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| 20 | **CONTROL PANEL** | | | | | | | | | | | | | | | | | |
| | for Single engine | | | 37100-98J11-000 064 | - | 37100-98J11-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | for Dual engine | | | 37100-98J21-000 065 | - | 37100-98J21-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | for Triple engine | | | 37100-98J31-000 066 | - | 37100-98J31-000 | - | - | - | - | - | - | - | - | - | - | - | - |
| | for Quad engine | | | 37100-98J21-000×2 | - | 37100-98J21-000×2 | - | - | - | - | - | - | - | - | - | - | | |
| 24 | **EMERGENCY SWITCH PANEL** | | | 37803-93J03-000 089 | 37803-93J03-000 089 | 37803-93J03-000 | 37803-93J03-000 089 | 37803-93J03-000 089 | 37803-93J03-000 089 | 37803-93J03-000 089 | 37803-93J03-000 089 | 37803-93J03-000 089 | 37803-93J03-000 089 | - | - | - | 37803-99E03-000 | - |
| 24 | **PTT SWITCH PANEL** | | | - | 37805-93J00-000 094 | - | 37805-93J00-000 094 | 37805-93J00-000 094 | 37805-93J00-000 094 | 37805-93J00-000 094 | 37805-93J00-000 094 | - | - | - | - | - | - | - |
| 24 | **LIGHTING SWITCH PANEL** | | | - | 37210-93J00-000 090 | - | 37210-93J00-000 090 | 37210-93J00-000 090 | 37210-93J00-000 090 | 37210-93J00-000 090 | 37210-93J00-000 090 | 37210-93J00-000 090 | 37210-93J00-000 090 | - | - | 37210-93J00-000 090 | 37210-93J00-000 090 | - |
| 32 | **STATOR & PULSER COIL COMPONENT** | | | - | - | - | - | - | - | - | - | 32120-95J00-000 119 | - | - | - | - | - | - |
| 31 | **ELECTRIC STARTER KIT** | | | - | - | - | - | - | - | - | - | 31000-95J10-000 109 | 31000-89L02-000 | 31000-99J00-000 | - | - | - | - |
| 31 | **BATTERY CHARGING KIT** | | | - | - | - | - | - | - | - | - | 32000-95J01-000 | 32000-89L00-000 | 32000-99J00-000 | 32000-91J12-000 | - | - | - |
| 32 | **BATTERY ISOLATOR LEAD SET** | | | 33830-98J10-000 | - | 33830-96J00-000 | 33830-96J00-000 118 | - | - | - | - | - | - | - | - | - | - | - |
| 32 | **ANODE** | | | See page 32 | See page 32 | See page 32 | See page 32 | See page 32 | See page 32 | See page 32 | See page 32 | See page32 | See page 32 | See page 32 | See page 32 | See page 32 | See page 32 | See page 32 |
| 28 | **TILLER HANDLE KIT** | | | - | - | - | - | - | 63002-90J31-0EP 104 | 63002-87L11-0EP 103 | 63002-88L10-0EP 102<br>63002-88L20-0EP 101 | - | - | - | - | - | - | - |
| 29 | **STEERING EXTENSION KIT** | | | - | 67630-93J00-000 107 | - | 67630-93J00-000 107 | - | - | - | - | - | - | - | - | - | - | - |
| 29 | **DRAG-LINK KIT** | | | - | 67700-93J00-000 | - | 67700-96J00-000 | 67701-90J00-000 | 67701-90J00-000 | 67701-87L01-000 | 67701-87J11-000 | 67700-95J01-000 | - | - | - | - | 67701-94420-000 | - |
| 29 | **STEERING-BRACKET ATTACHMENT** | | | - | - | - | - | - | - | - | - | 43755-95J01-000 | - | - | - | - | - | - |
| 29 | **DUAL-ENGINE TIE-BAR** | | | - | 67600-93J00-000 | - | 67600-93J00-000 | 67600-90J00-000 106 | 67600-90J00-000 106 | - | - | - | - | - | - | - | - | - |
| 33 | **FUEL TANK** | | | - | - | - | - | 65000-95D01-000 133 | 65000-95D01-000 133 | 65000-95D01-000 133 | 65000-95D01-000 133 | 65000-95D01-000 133 | 65000-89L10-000 | 65000-89L10-000 | 65000-99100-000 132 | 65000-95D01-000 133 | 65000-95D01-000 133 | 65000-95D01-000 133 |
| 34 | **FUEL-HOSE COMPONENT** | | | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 | See page 34 |
| 36-37 | **PROPELLER** | | | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 | See page 36-37 |

Items and their part numbers showing in the application chart are typically recommended, and applicable to models of engine numbers shown in page 02.
Please consult your local dealers regarding rigging-parts and accessories for earlier engines.